 


1/10遥控四驱门桥仿真攀爬车YK4106 说明书

1/10 SCALE RC ROCK CRAWLER 4WD YK4106 INSTRUCTION MANUAL

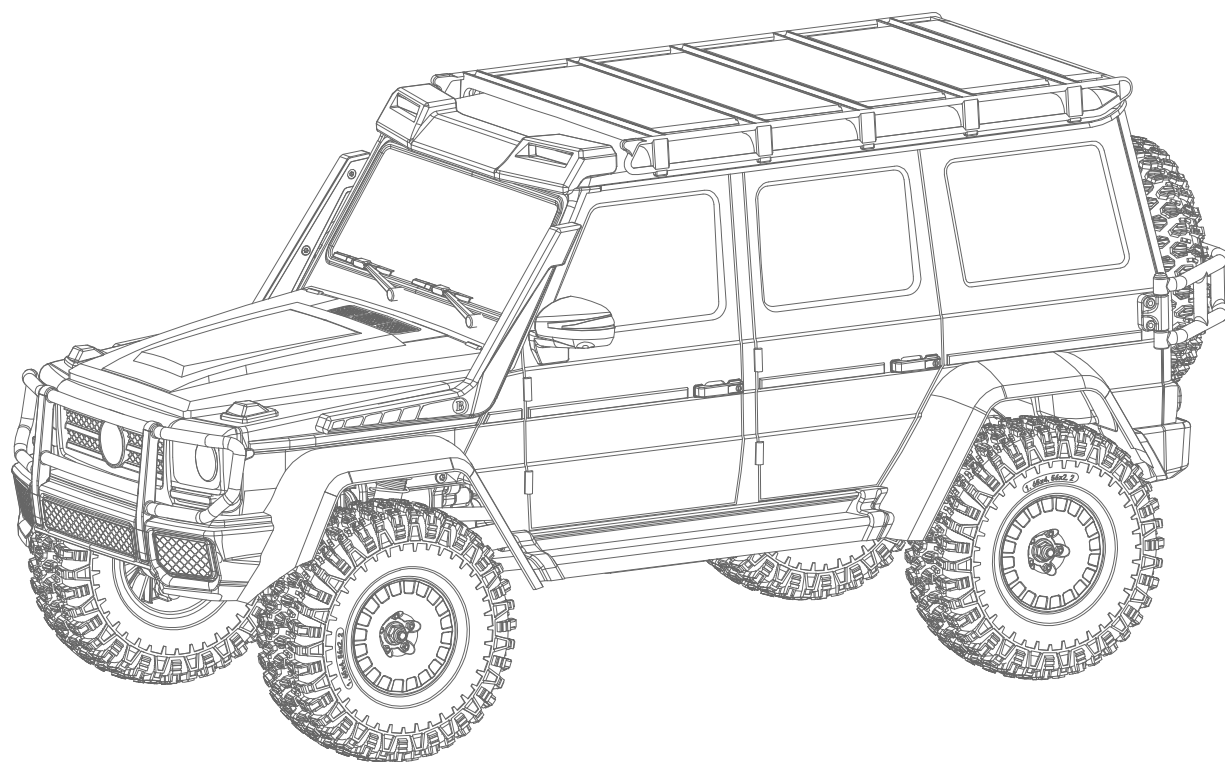

感谢您购买我们的产品！祝您玩得开心，为了获得最佳产品性能体验，请在使用前务必认真阅读说明书。

Thank you for your purchasing. Before operating this vehicle, please read manual materials thoroughly. This manual contains all the necessary set-up and operating procedures that allow you to unlock the performance.

目录	01
操作说明和注意事项	02~08
爆炸图	09~25
配件表	26~33

Table of Contents	01
Instructions and Precautions	02~08
Explode Diagram	09~25
Parts List	26~33

安全注意事项

SAFETY PRECAUTIONS AND WARNINGS

年龄建议：不适合14岁以下儿童。这不是玩具。

Age Recommendation: Not for children under 14 years. This is not a toy.

- 1) 严禁在公共场所或拥挤的地方操作模型车。本产品不允许儿童在没有成人直接监督下使用。
Never operate the model in public places and the street or in populated areas for any reason. This product is not intended for use by children without direct adult supervision.
- 2) 严禁反接电池或拆解电池，这是危险的，并可能引起火灾。
Never reverse install the battery or disassemble the battery, which is dangerous and may cause a fire.
- 3) 本产品包含细小且锋利的零件，请将任何化学品、小零件和电子设备放在儿童接触不到的地方。
This product contains small and sharp parts, keep all chemicals, small parts and anything electrical out of the reach of children .
- 4) 当不使用模型车时，请先断开电源并把电池从车身移出。此外遥控器电源关闭后，应取出电池以免漏液。
When not use the vehicle, power OFF the vehicle and then the transmitter. Unplug the battery and remove it from the vehicle. Also remove the transmitter battery to avoid leakage.
- 5) 请不要混用新旧或不同类型电池。
Please do not mix old and new batteries or different types of batteries.
- 6) 不要在遥控器电池电量低的情况下操作车子，如果电池电量过低，请更换电池。
Never operate your model with low transmitter batteries. Replace batteries when vehicle batteries are low.
- 7) 在开机状态下，切勿拆卸遥控器电池。
Never remove the transmitter batteries while the model is powered ON.
- 8) 请根据当地有关规定，妥善弃置或回收电池。
Dispose of used batteries according to national regulations.
- 9) 充电时，请从模型车中取出电池，如果电池变形，请不要使用。
When charging the battery, please take out the battery from the vehicle. If the battery is deformed, please do not use it.
- 10) 电池应在成人监督下充电，无人看管时请勿给电池充电。
The battery should be charged under adult supervision, do not charge the battery when unattended.
- 11) 遥控系统有各种不同功能和设置，初次接触前请确保对所有功能设置完全理解，未能正确操作可能导致产品损坏。
The radio system has different functions and settings, please read the entire manual to gain a full understanding of functions, failure to operate correctly could result in product malfunction and damage.


产品规格参数

PRODUCT SPECIFICATION:

车长Length:	534.5mm
车宽Width:	247mm
车高Height :	267mm
轮胎Tire Diameter/Width:	116/42mm
轴距Wheelbase:	325mm
车重 Product Weight:	3.8KG
电池仓尺寸Battery Box Size:	156*48mm
接近角Approach:	63°
离去角Departure:	58°
转向角度Steering angle:	40°
离地间隙Ground clearance:	50mm


马达齿 Pinion Gear	低速齿轮比 Low speed Gear Ratio	高速齿轮比 Low speed Gear Ratio
12T	81.95	35.20
13T	75.70	32.50
14T	70.30	30.20
15T	65.60	28.20

 遥控器功能介绍 TRANSMITTER FUNCTIONS

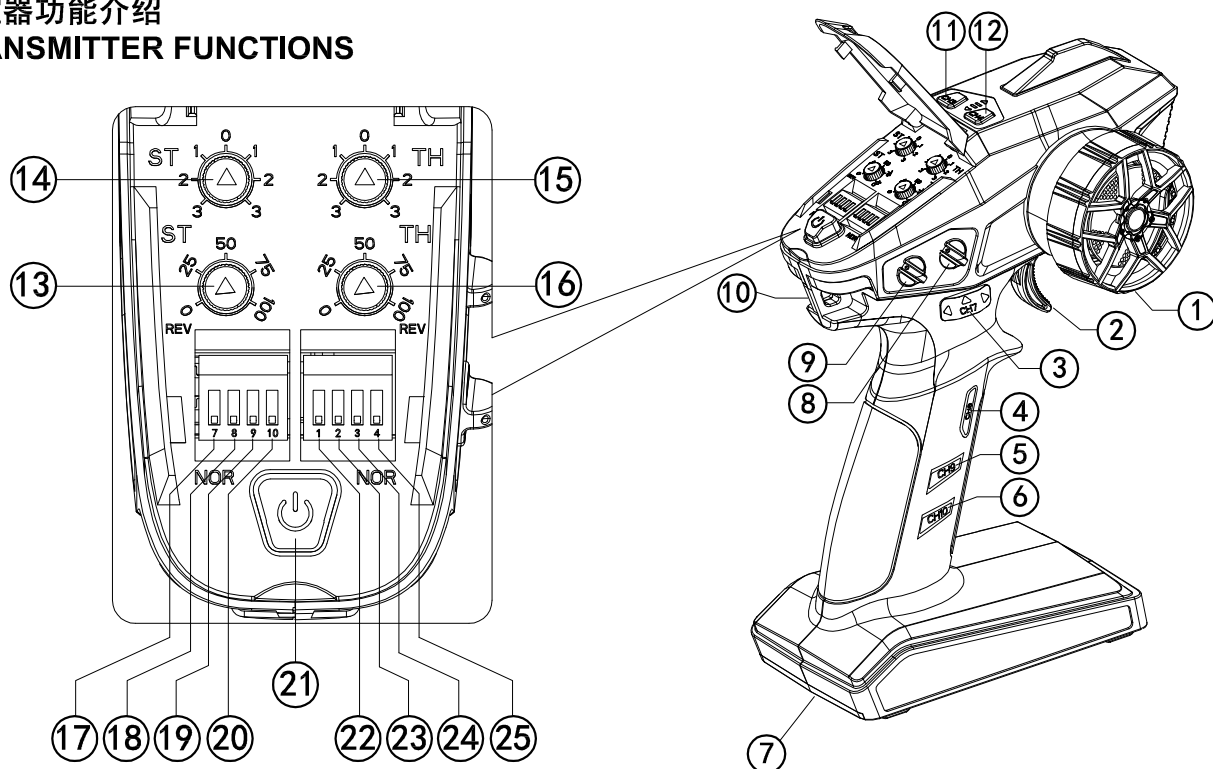



- | | | |
|--|---|---------------------------------------|
| 1. 转向轮:左转向灯/右转向灯 (CH1)
Steering Wheel:Turn Signal light
Left/Right | 9. 第5通道拖刹设置 (拖刹力度旋钮可调)
CH 5 Drag Brake Force Setting
(Adjust Drag Brake Force Knob) | 19. CH9反向设置开关
CH9 Reverse Switch |
| 2. 油门/刹车扳手: 刹车灯/倒车灯 (CH2)
Throttle/Brake Trigger:Brake Light | 10. 挂绳孔 (Lanyard Hole) | 20. CH10反向设置开关
CH10 Reverse Switch |
| 3. 灯控开关 (CH3)
Lighting Control Button (CH3) | 11. 前差速锁开关 (CH3)
Front Differential Lock/Unlock Button(CH3) | 21. 电源开关 (OFF/ON) |
| 4. 高低速换挡开关 (CH8)
Hi/Low Speed Conversion | 12. 后差速锁开关 (CH4)
Rear Differential Lock/Unlock Button (CH4) | 22. CH1反向设置开关
CH1 Reverse Switch |
| 5. 坦克掉头模式开关 (CH9)
Button for Rear Inner Wheel Lock Mode | 13. 方向通道比率调节旋钮 (ST. D/R) | 23. CH2反向设置开关
CH2 Reverse Switch |
| 6. 第10通道旋钮 (CH10)
CH10 knob | 14. 方向通道微调旋钮 (ST. TRIM) | 24. CH3反向设置开关
CH3 Reverse Switch |
| 7. 电池仓
Battery Compartment | 15. 油门通道微调旋钮 (TH. TRIM) | 25. CH4反向设置开关
CH4 Reverse Switch |
| 8. 第6通道旋钮 (CH6)
CH6 knob | 16. 油门通道比率调节旋钮 (TH. D/R) | |
| | 17. CH7反向设置开关
CH7 Reverse Switch | |
| | 18. CH8反向设置开关
CH8 Reverse Switch | |

 遥控器电池安装 INSTALLING THE TRANSMITTER BATTERIES

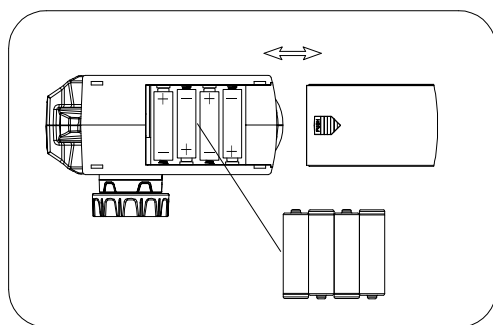

- 按箭头方向滑动，拆下或者安装发射机电池盖。
Remove the battery cover from the transmitter (Slide cover as shown arrow direction)
- 装4颗电量充足的AA电池，注意电池尺寸正负极如图所示示意，不要装反。
Install 4 AA batteries with sufficient power as shown. Taking care to align the battery polarity.
- 不要混用新旧或不同类型的电池。更换电池型号不正确，或给非充电电池充电有爆炸危险。
Never use different batteries or mixed old and new batteries. Risk of explosion if battery is replaced by an incorrect type or charging non-rechargeable batteries.
- 定期检查遥控器上电池电量。电池电量不足情况下，不能操作车子，信号会遭受影响，车子可能瞬间失控，导致发生碰撞或伤害。长时间不使用时，请将电池从遥控器内取出。
Check the transmitter battery level regularly. Never operate your model with low transmitter batteries, the radio signal may subject to interference and cause momentary loss of control and collisions or injury. When not in use for a long time, please remove the battery from the transmitter.

  电调设置说明 ESC Instructions

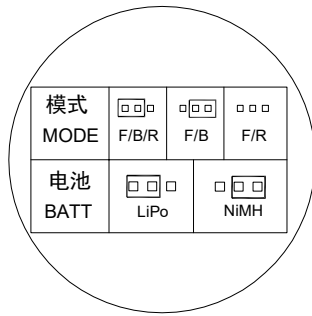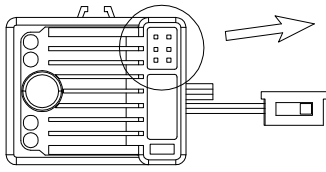

F/B/R: 前进/刹车/后退模式
F/B/R: Forward/Brake/Reverse
F/B: 前进/刹车模式
F/B: Forward/Brake
F/R: 前进/后退模式(攀爬模式)
F/R: Forward/Reverse(Crawler mode)


如图所示，电调跳线帽插入不同的位置，调整电调的模式和电池的类型，每次插好后需关掉电调重启生效。

As the image shown, Jumper locations : to change the ESC mode and Battery(LiPo or NiMH). Kindly note restart the ESC to save the setting


电子设备的连接 ELECTRONICS CONNECTION

出厂前所有电子设备均已连接好
第1通道连接15KG舵机控制转向
第2通道连接电调控制动力马达工作
第3通道连接17G舵机控制前桥差速锁
第4通道连接17G舵机控制后桥差速锁
第5通道连接17G舵机控制高低速换挡
第6通道连接25KG舵机控制坦克调头
注意电池，马达的连接，黑色负极，红色正极。

 Before leaving the factory, all electronic devices are pre-connected:
Channel 1: 15KG servo motor for steering control.
Channel 2: ESC for power motor operation control.
Channel 3: 17G servo motor for front axle differential lock control.
Channel 4: 17G servo motor for rear axle differential lock control.
Channel 5: 17G servo motor for high-low speed shifting control.
Channel 6: 25KG servo motor for tank pivot mode control.
Note the battery and motor connections, with black indicating negative and red indicating positive.

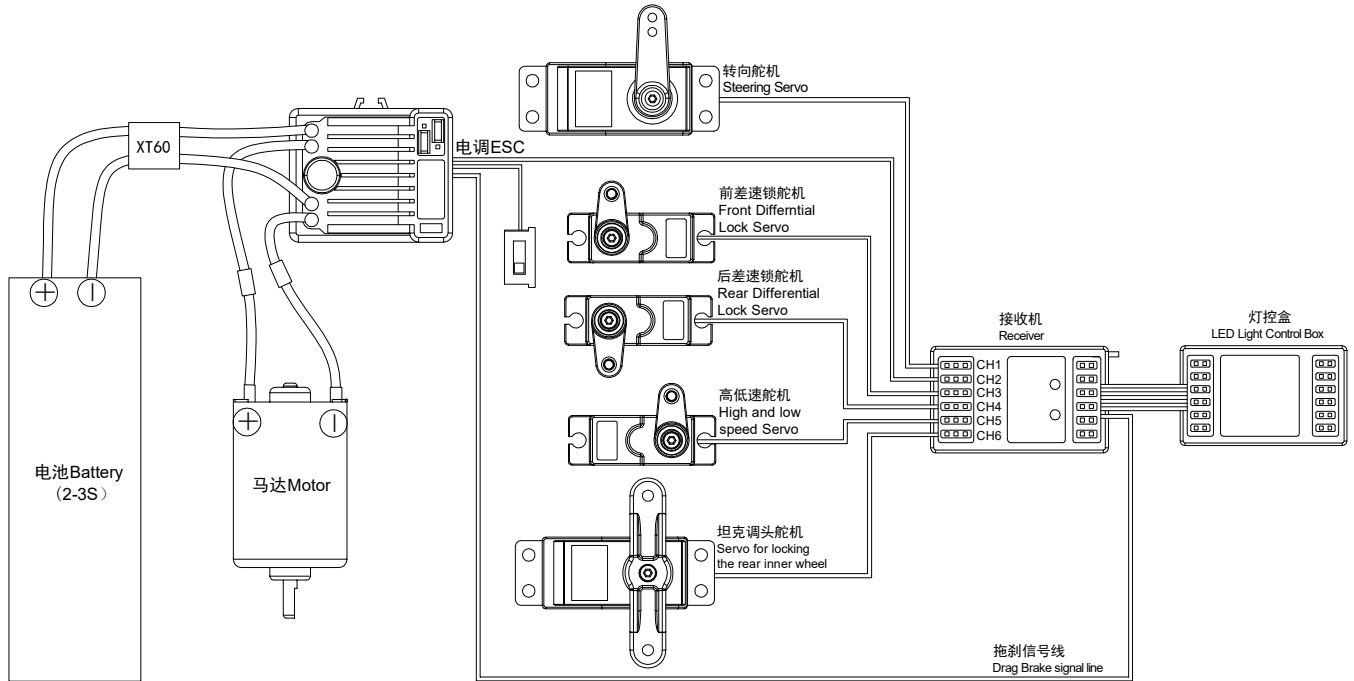


车灯的连接 LED LIGHTS CONNECTION

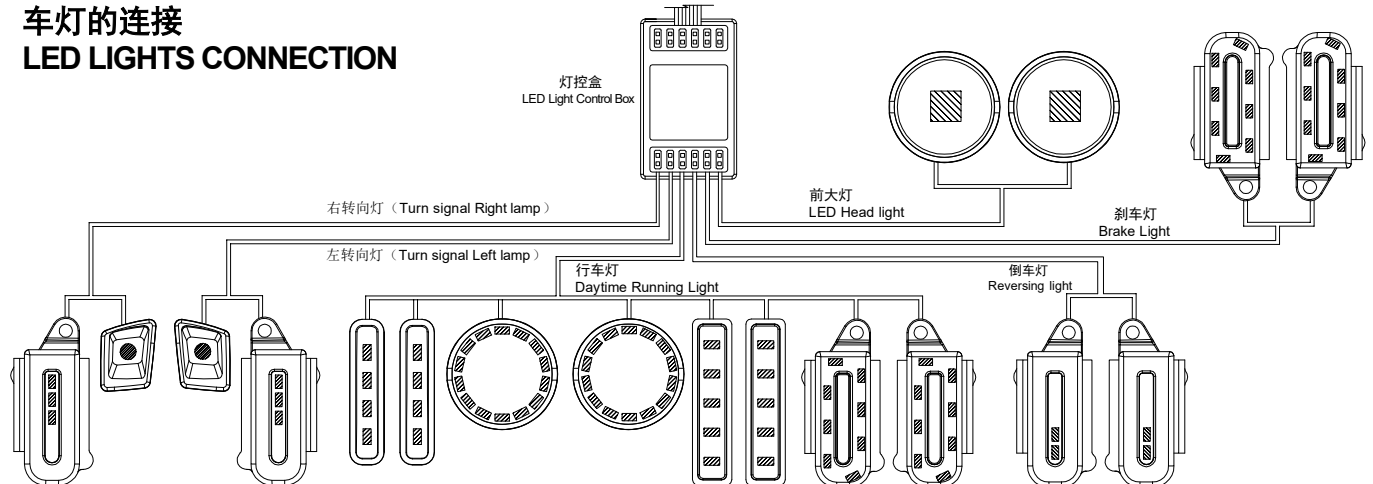 


操作说明 Instructions

 从车底前杠中间位置，逆时针拧开旋钮
Turn the knob counterclockwise at the middle position fo front bumpe

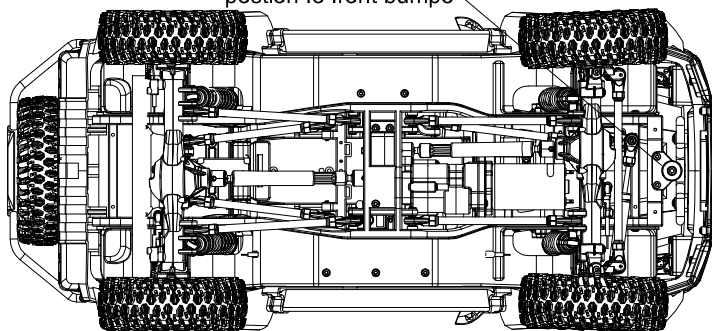


 从车头两边伸入手指，稍用力往上翻开车壳
Step into the fingers from both sides of the car and turn the car shell up slightly

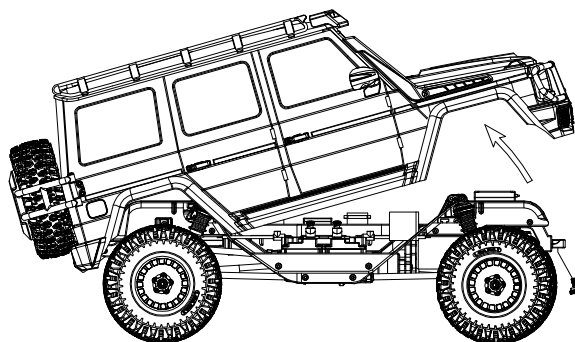


1. 向后上翻开车壳后。
After turning the bodyshell back.
2. 将充满电的电池装入电池盒，拉紧电池绑带。
Install fully charged battery in the battery box, then tighten battery strap .
3. 确保电调关闭，插入连接好电池线和电调线。
Make sure the ESC is off, plug in the battery cable and the ESC cable.
4. 打开电调开关，盖好车壳，准备遥控器设置。
Turn on the ESC, cover thebodyshell, and prepare the Transmitter system settings.


 
操作模型车 DRIVING PRECAUTIONS

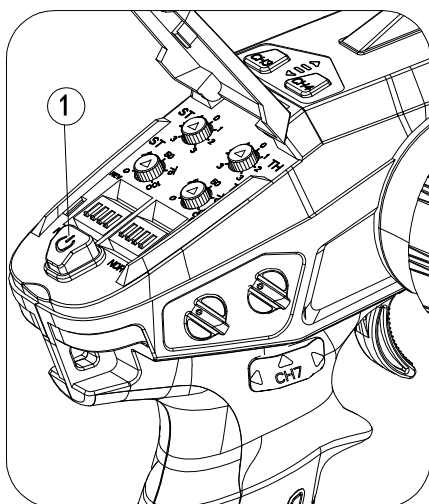

 1. 打开遥控器电源开关，遥控器电源指示灯点亮。
Power ON the transmitter, the battery Indicator lights.
2. 打开电调电源开关，电调指示灯点亮，控制系统进入工作状态。
Turn on ESC Power Switch, the LED Lights, indicating control system enters working status.

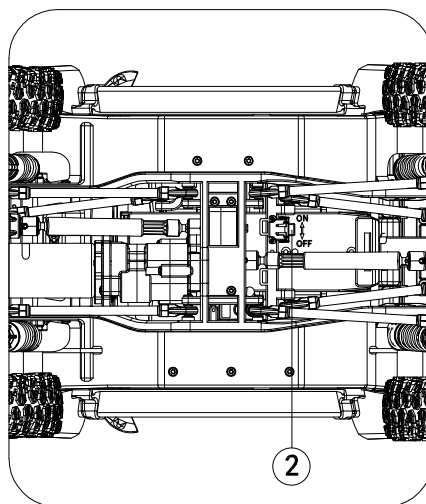

操作模型车 DRIVING PRECAUTIONS

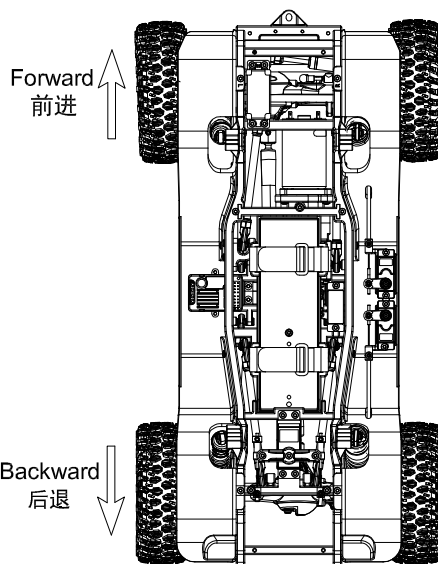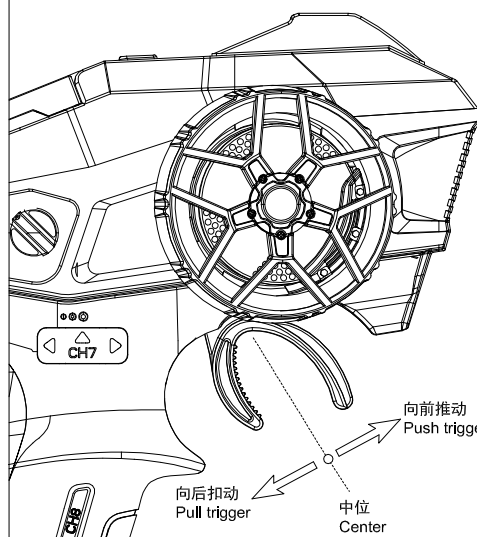  

用手指向后扣动遥控器扳机，车将向前行驶。
用手指向前推动扳机一次为刹车，松开手指待扳机回到中位后再向前推动则为倒车。

To move the vehicle forward, pull the Throttle trigger .

 
 
 
To reverse the vehicle, push the transmitter trigger one time is brake, pause, then return the trigger to center. Push again is Reverse.

操作模型车


DRIVING PRECAUTIONS

车前轮的运动是随遥控器转向轮的调整而改变的。
遥控器转向轮向左转，车前轮也是左转。
遥控器转向轮向右转，车前轮也是右转。

The front wheel movement is controlled by transmitter steering wheel.
Turn transmitter steering wheel left, the vehicle front wheels turns left.
Turn transmitter steering wheel right, the vehicle front wheels turns right.

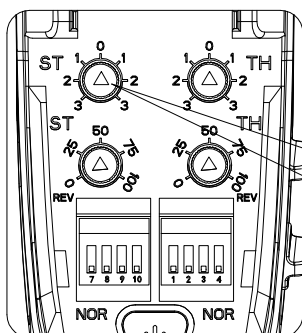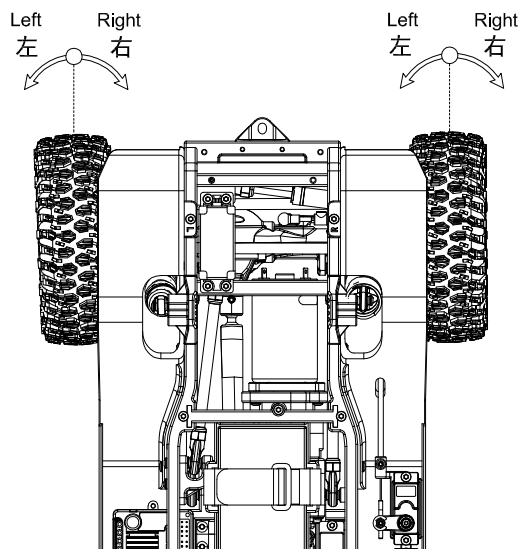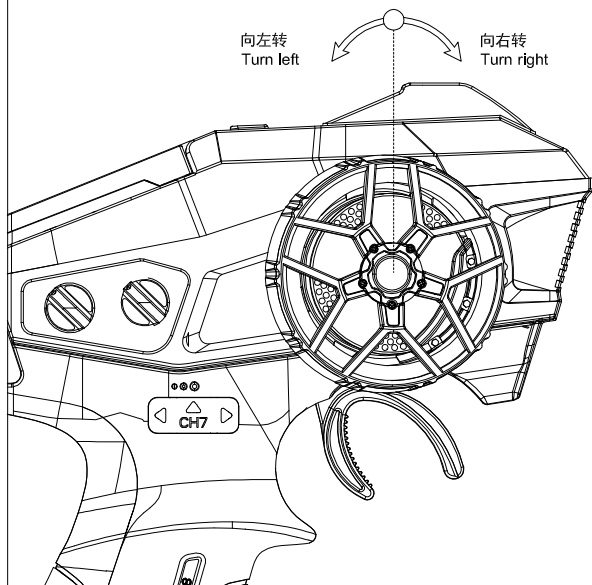


方向中位微调
Steering trim

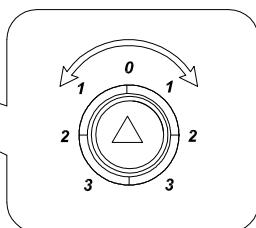 


在没有操控转向轮的情况下，车辆前轮应该处于中心位置。
如果前轮偏向左侧，请顺时针转动方向微调旋钮进行微调。
如果前轮偏向右侧，请逆时针转动方向微调旋钮进行微调。

 Without turning transmitter steering, the vehicle front wheels should maintain a straight line. If not, adjust ST Trim knob until the vehicle tracks straight. If the front wheel is tilted to the left, fine tuning ST Trim knob clockwise. If the front wheel is tilted to the right, fine tuning ST Trim knob counterclockwise.

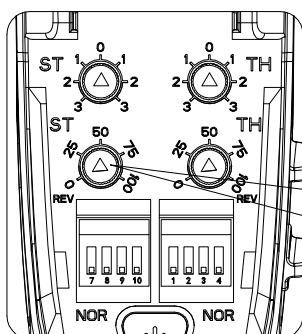


 方向角度舵量调整旋钮
Steering End Point Adjustment

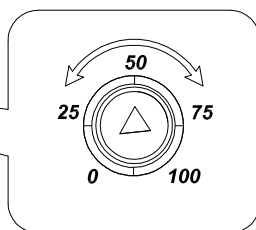


调整方向角度舵量大小，来适应不同弯角路面的行使需要。
顺时针转动该微调旋钮，可以将方向角度调整到最大。
逆时针转动该微调旋钮，可以将方向角度调整到最小。

 Adjust Steering End Point to help adapt to different terrains. Clockwise twist this knob: adjust to the maximum steering angles. Counterclockwise twist this knob: adjust to the minimum steering angles.

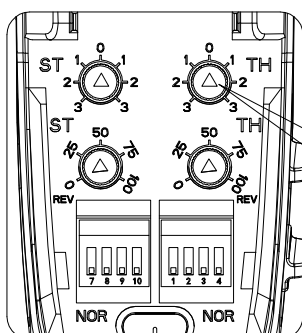


油门中位微调
Throttle Trim

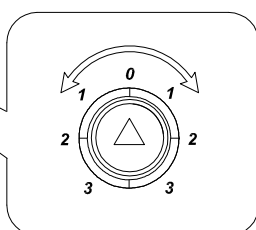 


在没有操控油门扳机的情况下，车辆应该处于静止状态。
如果车子自行前进，请逆时针转动油门中位微调旋钮进行微调。
如果车子自行后退，请顺时针转动油门中位微调旋钮进行微调。

 Without operating throttle trigger, the vehicle should be motionless. If vehicle moves forward, counterclockwise adjust Throttle Trim knob. If vehicle moves backward, clockwise adjust Throttle Trim knob.

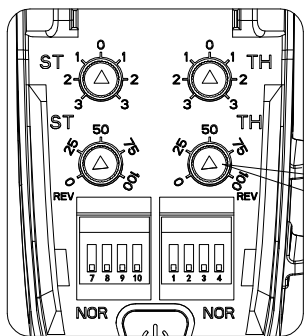

油门限速旋钮
Throttle Limit

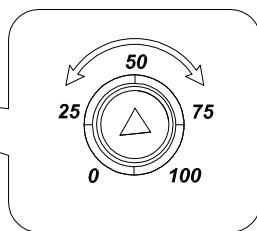 


设定遥控油门限速旋钮控制量大小，逆时针旋转是降低控制量（最低可以降到0%），顺时针旋转是加大控制量（最高值为100%正常油门控制量）。

对于初学者而言，可以先尝试调低油门控制量来适应车辆。


Set Throttle Limit knob to limits throttle output. Counterclockwise Throttle Limit knob to reduce the limit output(minimum 0%)

Clockwise adjust Throttle Limit knob to increase the limit output(maximum 100% is for normal)

 Suggest the less experienced select Throttle Limit to reduce speed.

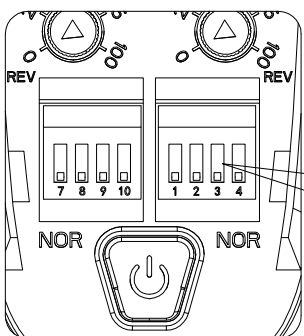


正反切换开关
Reverse switch

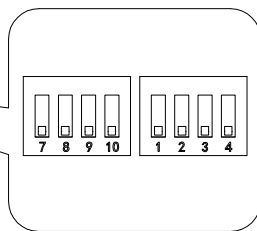 

如果遥控的操作与车辆动作不一致，请调整此正反切换开关，直至遥控操作和车辆动作一致。

 If the operation on transmitter is inconsistent with the vehicle actual performs (forward/backward, left/right) , please adjust this switch to correct.


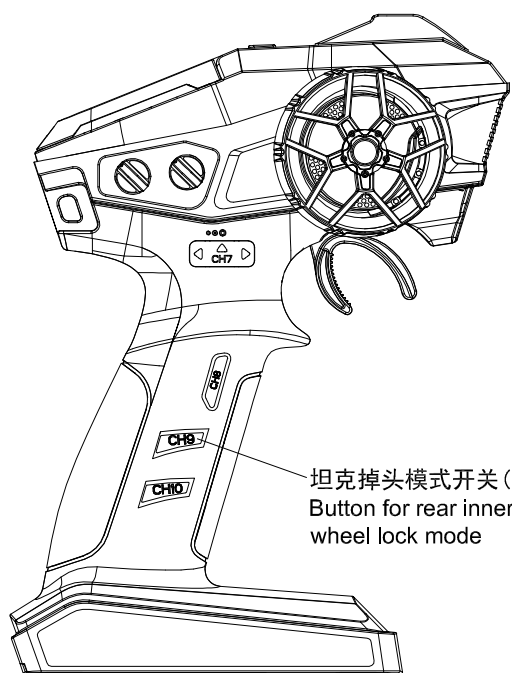


坦克掉头模式开关 (CH9)
Button for rear inner wheel lock mode

按下CH9通道按键，指示灯点亮，系统进入坦克掉头模式，此时如果后差速器是锁止状态，控制系统会强制解除后差速锁，此时打方向左转，左后轮会同步完成刹车；打方向右转，右后轮会同步完成刹车。此时就可以在小空间、小角度、小距离内实现调头或转弯，在低抓地力路面高速行驶可以实现原地掉头。


Pressing the CH9 button on the transmitter, blue LED illuminates, accompanied by a brief, intermittent two-tone sound from the buzzer, indicating that the system is in the rear inner wheel lock mode. If the rear differential is currently locked, the system automatically keeps the rear differential unlock. When steering left, the left rear wheel simultaneously is locked/braked; similarly, when steering right, the right rear wheel simultaneously is locked/braked. This feature facilitates precise vehicle turning in narrow spaces, within small circles, and over short distances. Additionally, it allows for executing sharp turns at high speeds on low-grip roads.

  后轮刹车机构
Rear wheel brakemechanism

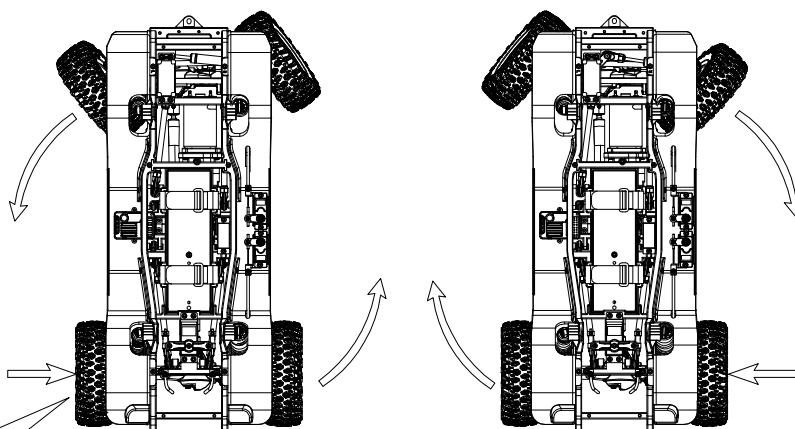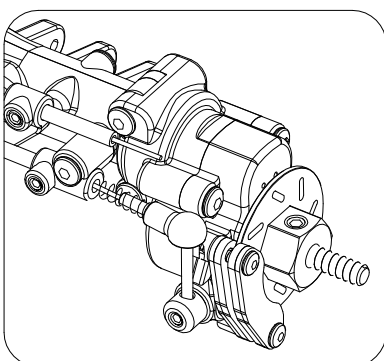



坦克掉头模式下，左转时左后轮同步进入刹车状态
In this mode, the rear left wheel is locked/braked when turn left

 坦克掉头模式下，右转时右后轮同步进入刹车状态
In this mode, the rear right wheel is locked/braked when turn right

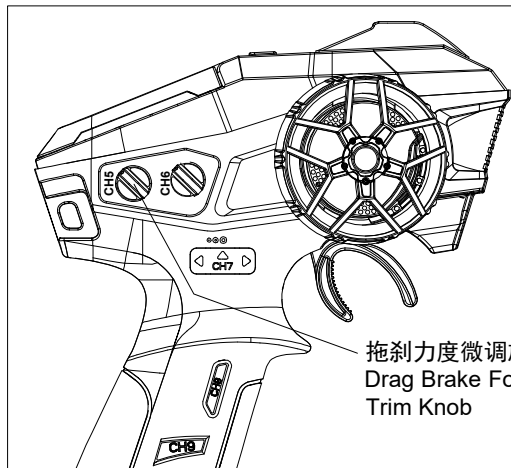


该旋钮用于设置拖刹力度，顺时针调节拖刹力度增大，逆时针调节拖刹力度减小，调整范围0-100%（攀爬模式下可设置拖刹力度）

  This knob is to adjust the amount of brake force. Turning the knob clockwise increases the drag brake force, while turning it counterclockwise decreases the drag brake force. Adjustment range is from 0 to 100%. (Drag brake force can be set in climbing mode)

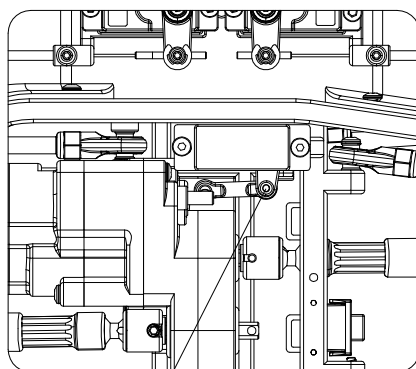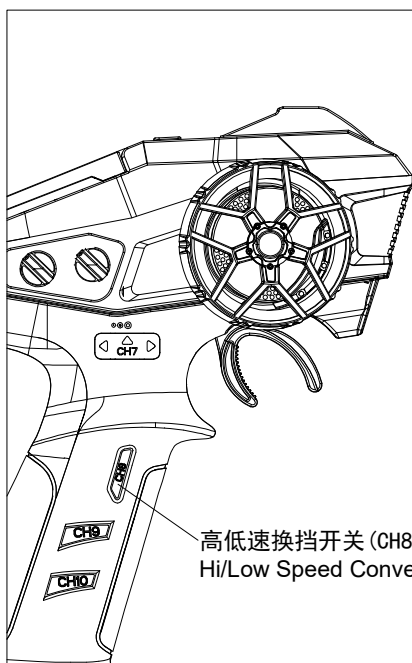

 CH8通道高低速换挡开关，指示灯不亮状态下，变速箱处于高速挡
CH8 high-low speed shift switch. When the indicator is off, the gearbox is in the high-speed mode.

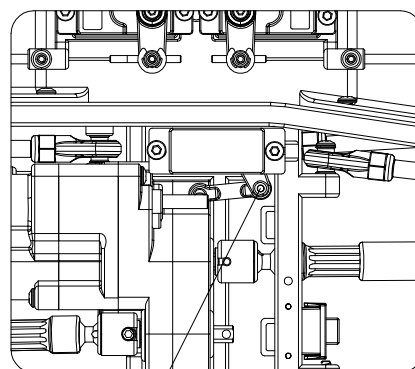

CH8通道高低速换挡开关，指示灯点亮状态下，变速箱处于低速挡
CH8 high-low speed shift switch. When the indicator light on, the gearbox is in the low-speed mode.

维修服务

REPAIR SERVICE:

- 1) 车辆需要经常保养，以保持其性能，特别是活动的零件部位，每次跑车完及时清除上面的尘土杂物。保持车辆清洁和良好的保养。

Periodic maintenance in order to ensure the vehicle best performance, especially the running parts. Remove chassis free of dirt and debris after every driving. Keep your vehicle clean and well maintained.

- 2) 定期检查车上有螺丝的地方，有必要就拧紧加固。
Regularly check the screws on the car and tighten them if necessary.

- 3) 经常检查车上面磨损/弯曲/坏掉的部件，有必要就换掉。
Always check for wear/broken/bent parts, and replace it if necessary.

- 4) 所有的零件都可以作为散件在爆炸图上找到编号，有损坏可以在零售商订购更换。有任何问题，都可以在零售商寻求帮助。

 
All parts listed on the exploded view. Damages can be ordered at the retailer. If you have any questions, you can ask for help at the retailer.

Differential Gear Assembly



差速器组 前/后




21145
平头 2.5×8
FH HEX Screw







21122
BB12×18×4

  

21123
BB15×21×4

 

21123
BB15×21×4

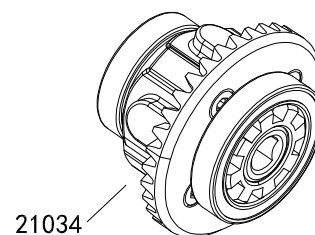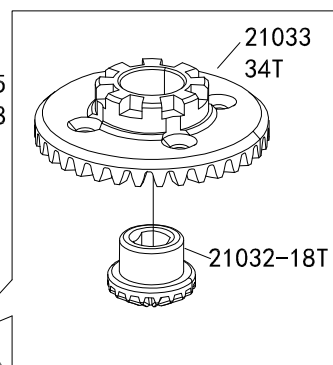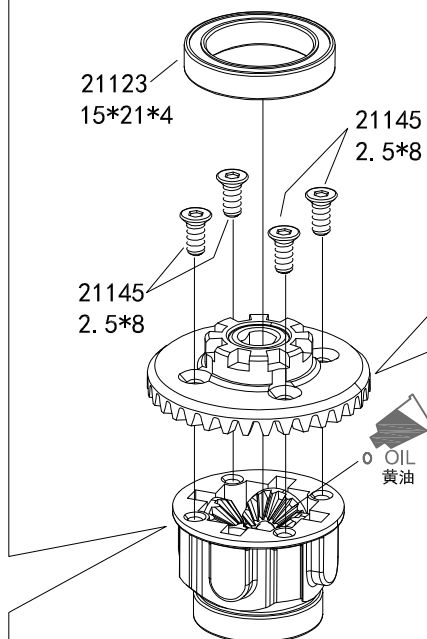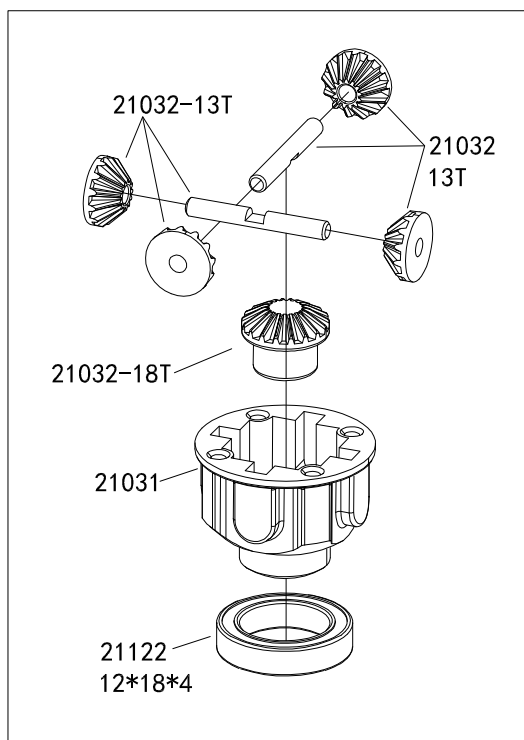    

Spindle set

 
转向臂组 左/右



21120
BB 5×11×4



21121
BB 6×12×4

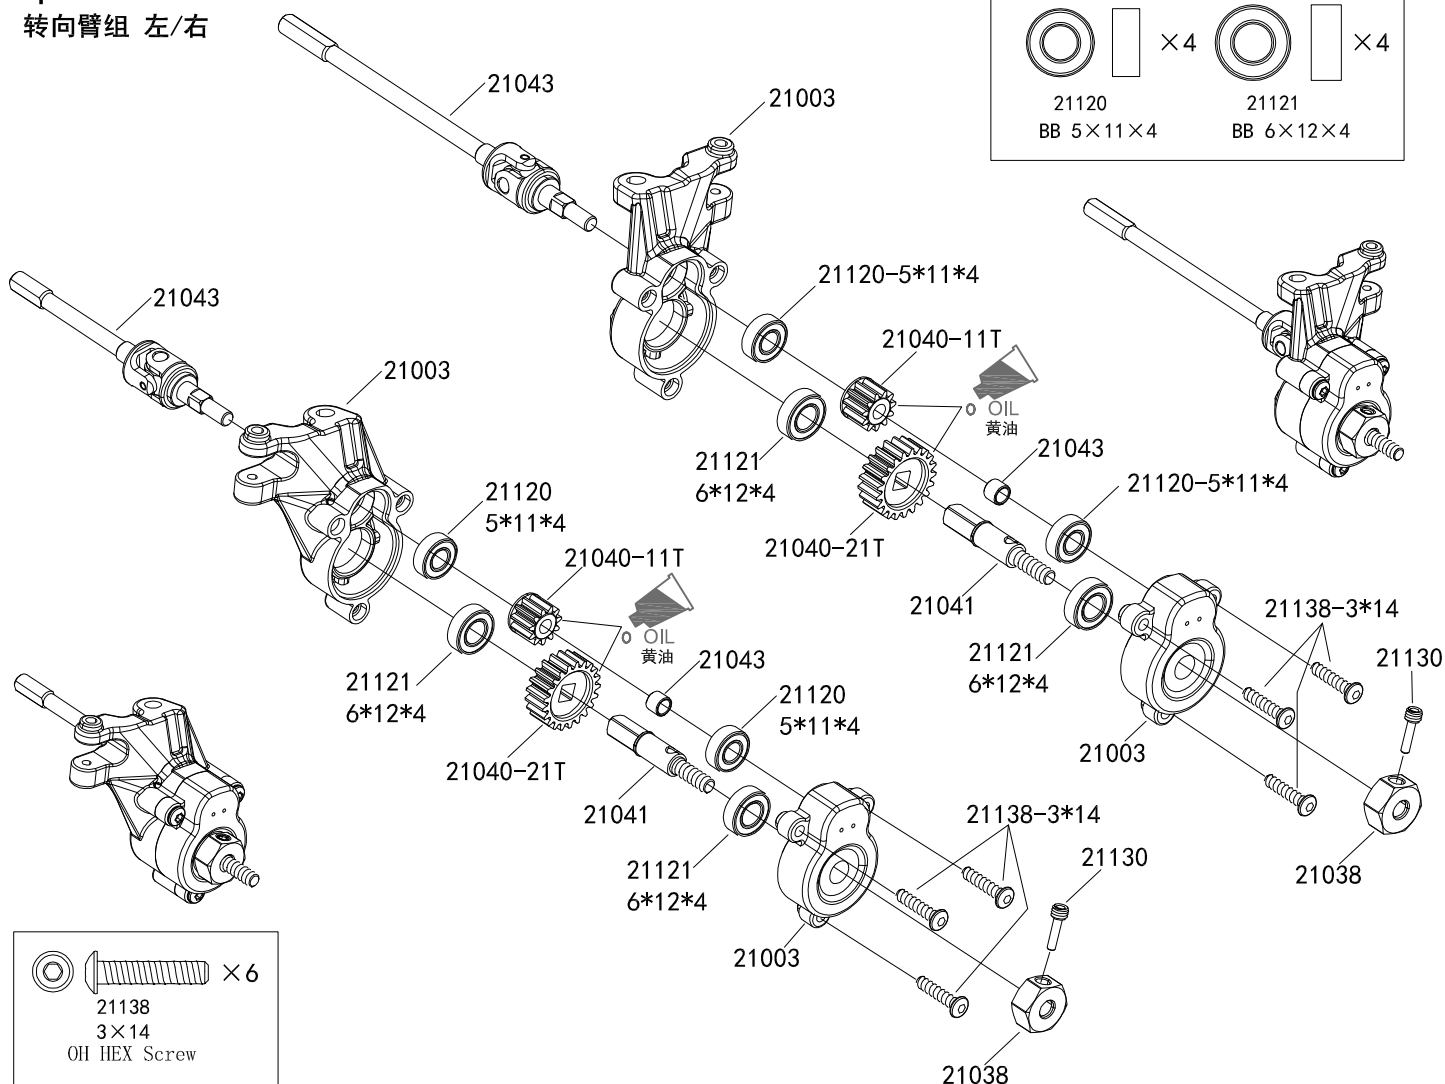

21138
3×14
OH HEX Screw

 
 
前桥组




前桥组



后桥组

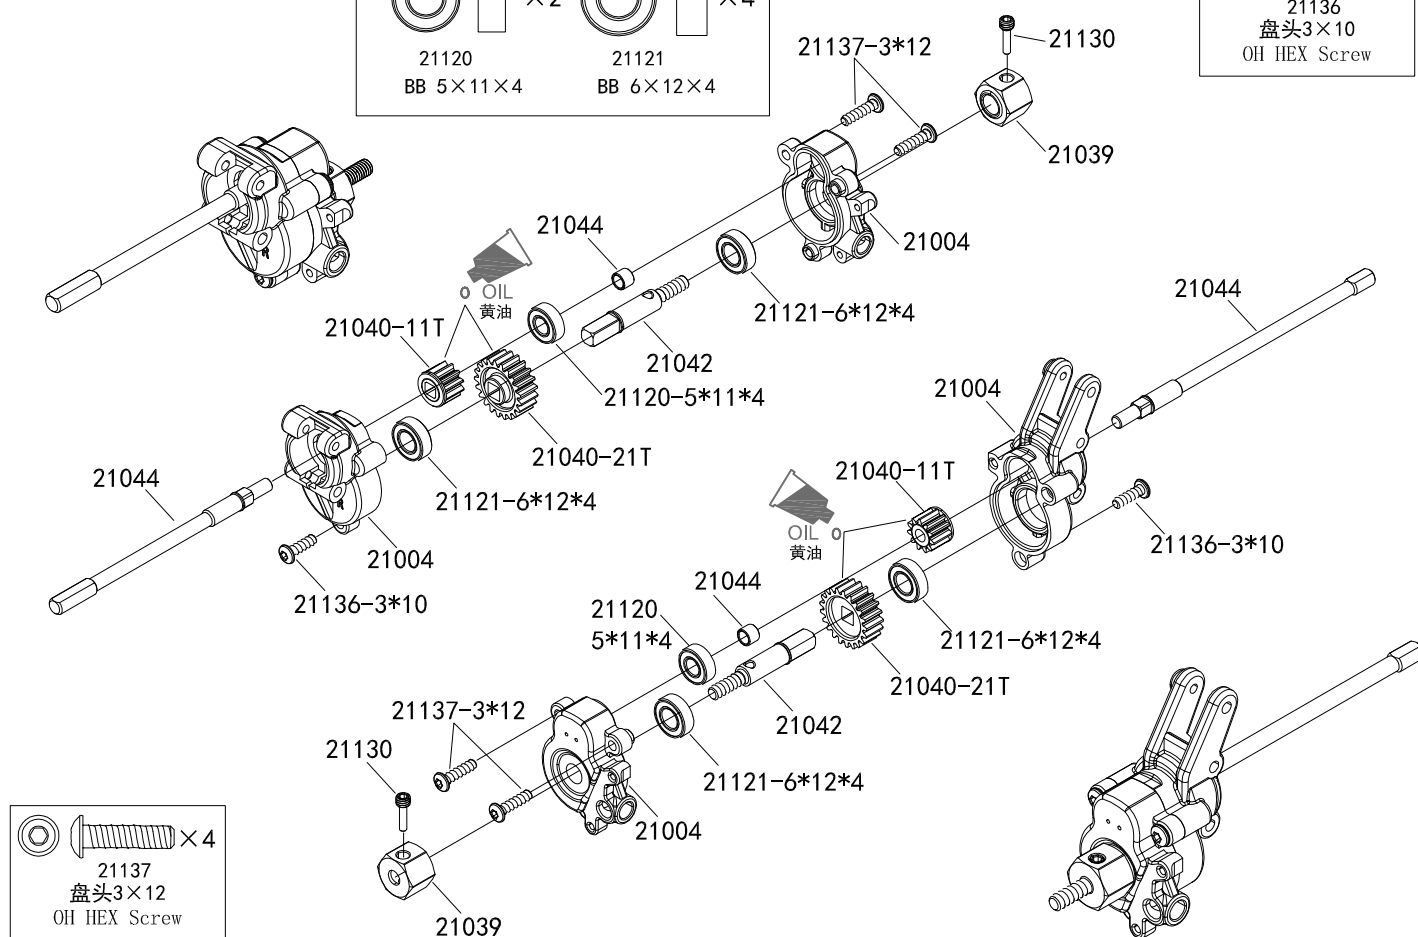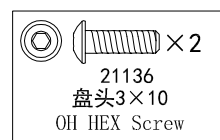


后桥组

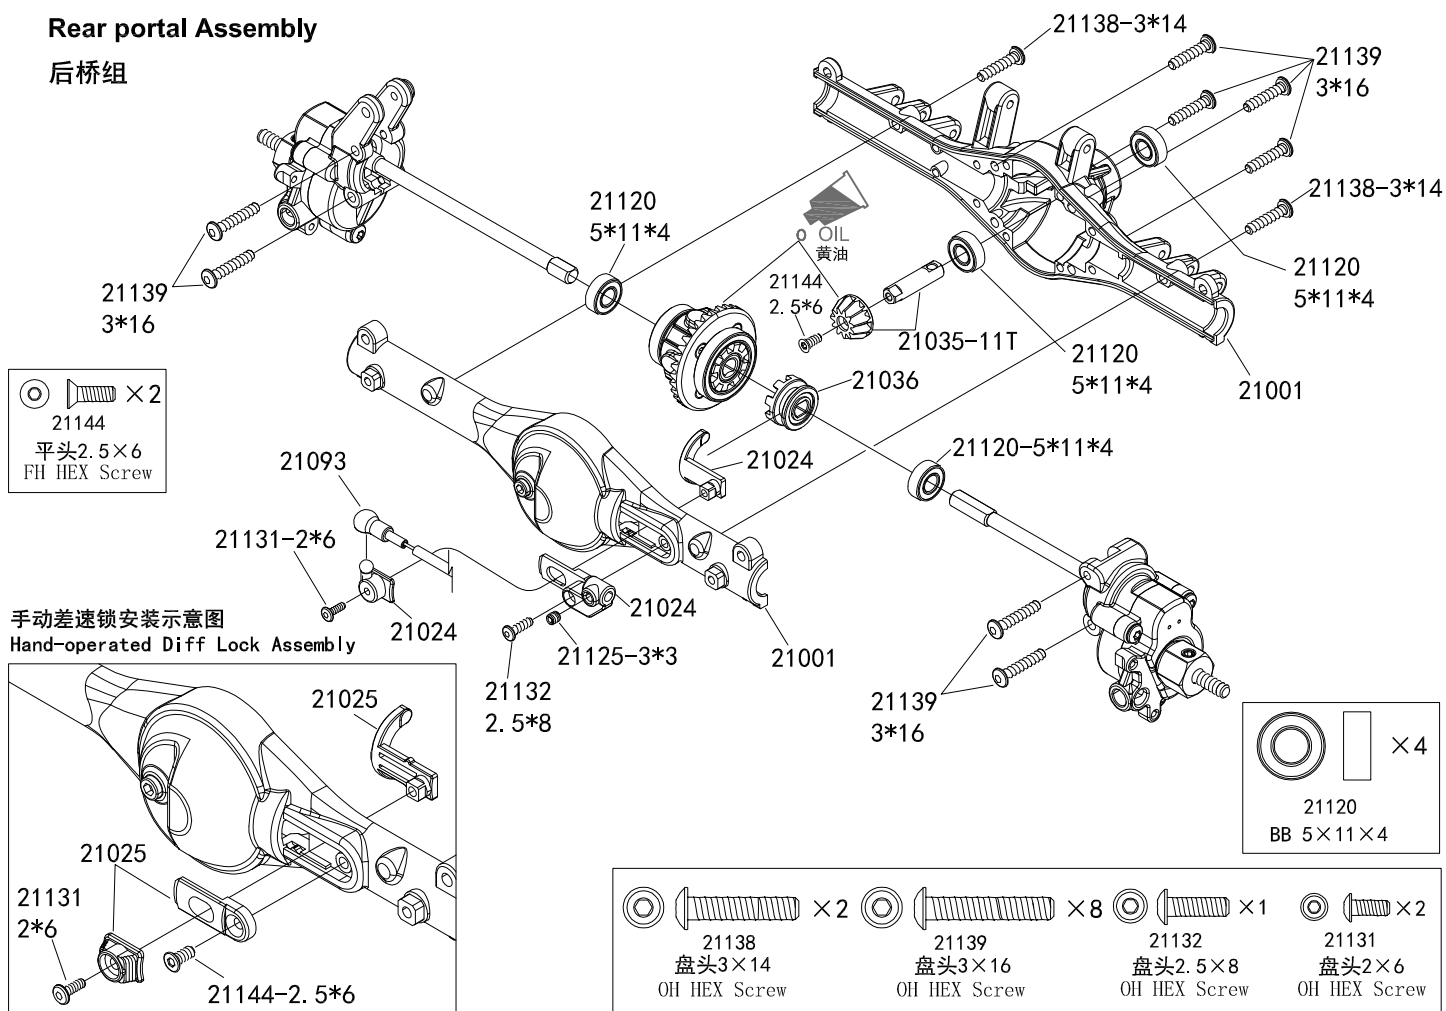 


Rear portal Assembly

 后桥刹车组装

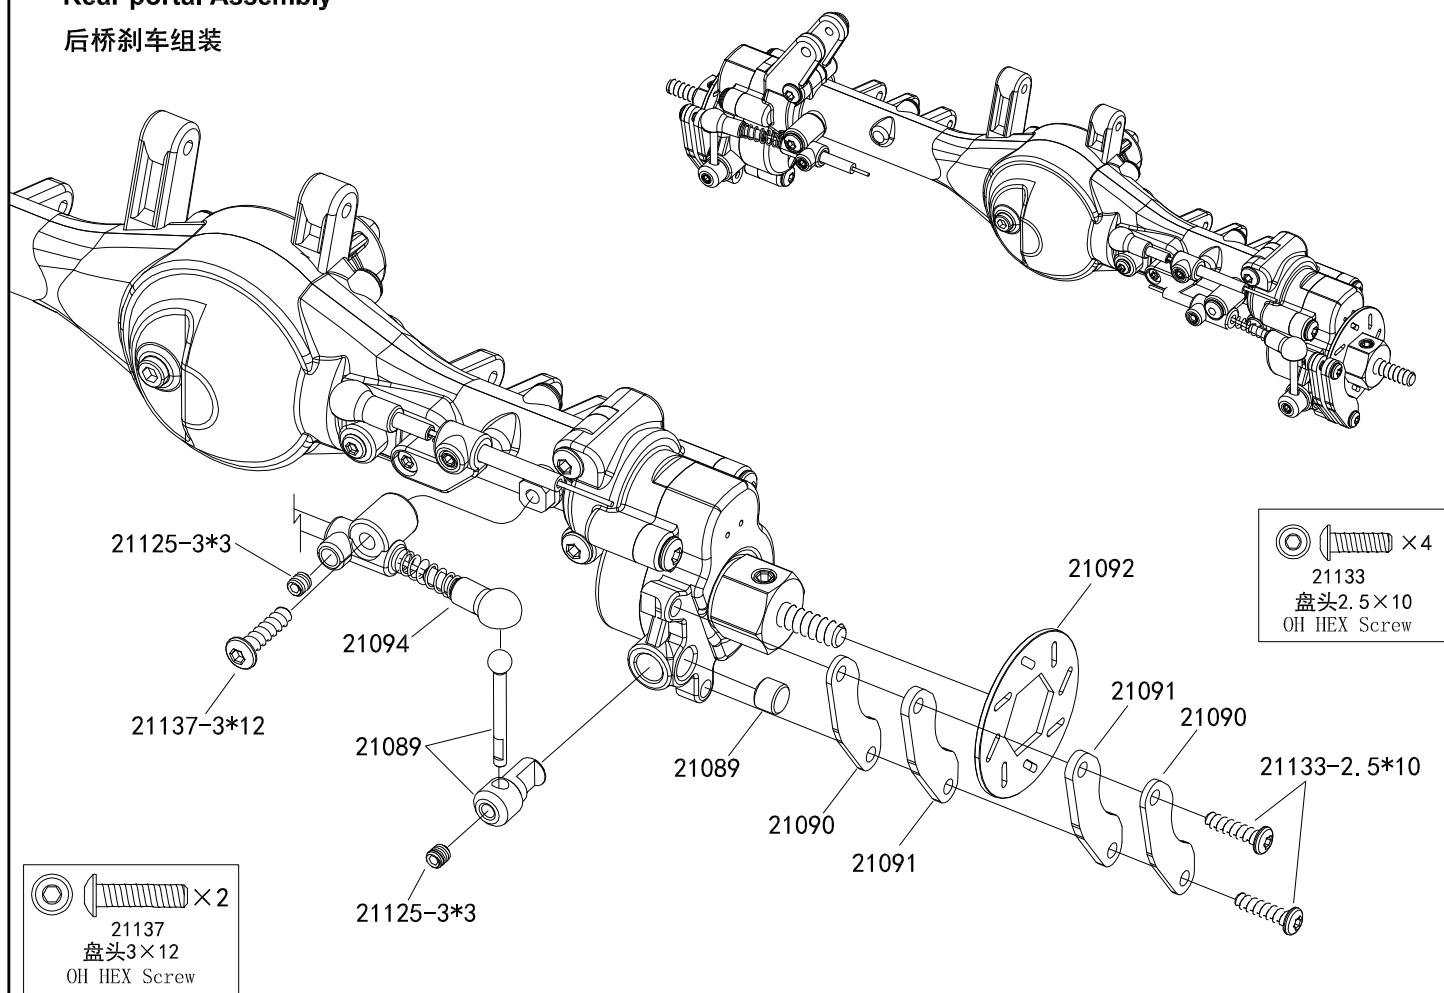






Shock Absorber Before/Middle/After

 避震器 前/后

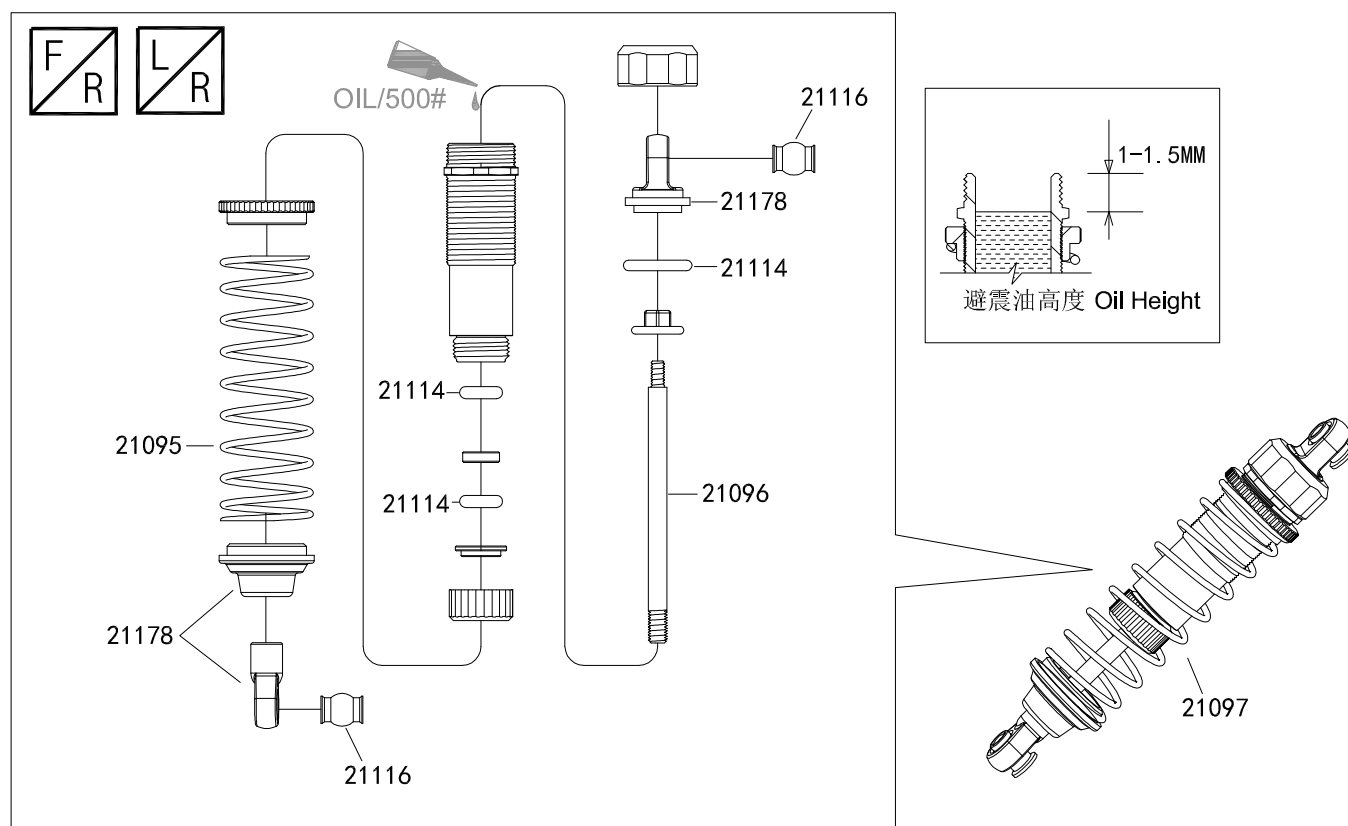






Front portal assembly linkage shock installation

     前桥组拉杆、避震器安装

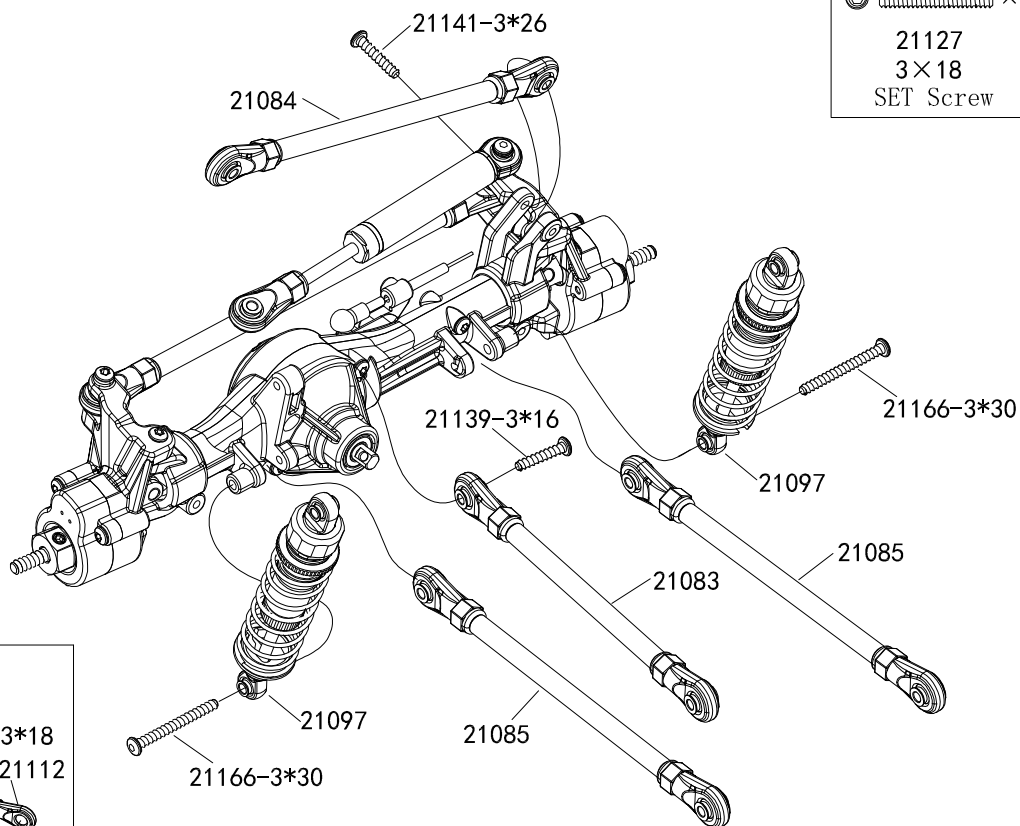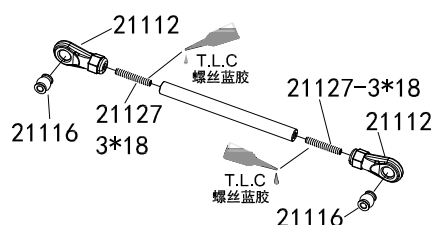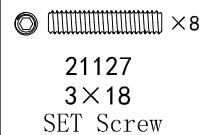




Rear portal assembly linkage shock installation

     后桥组拉杆、避震器安装

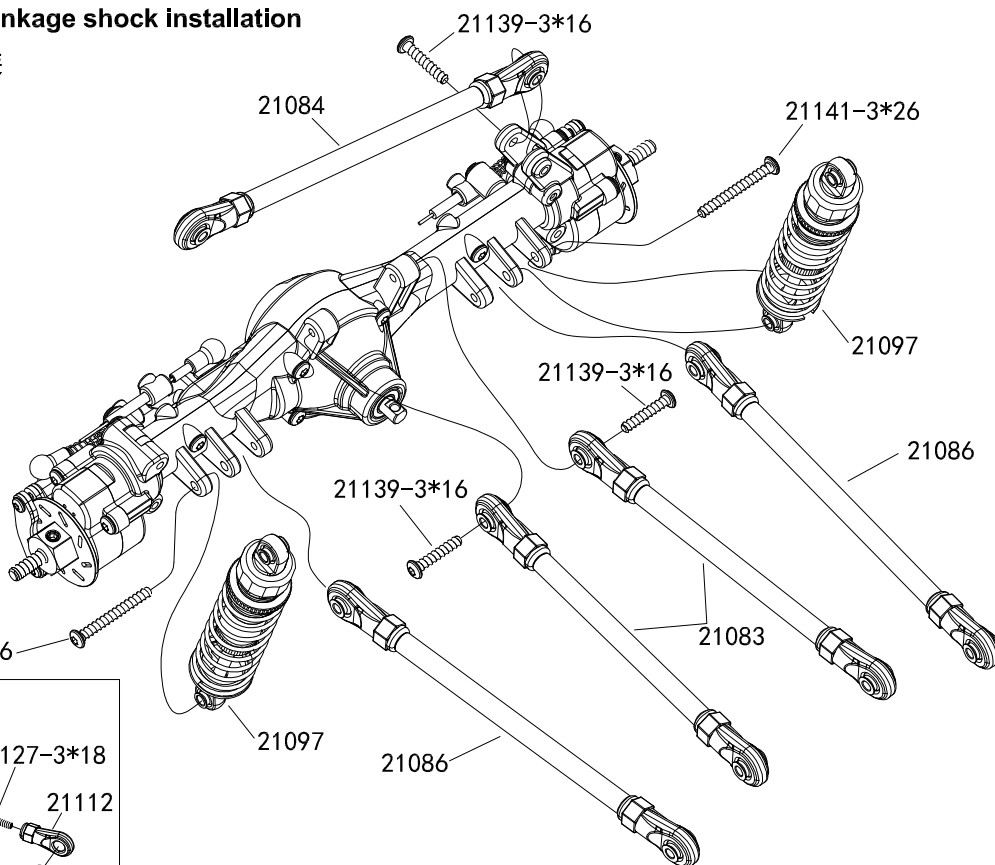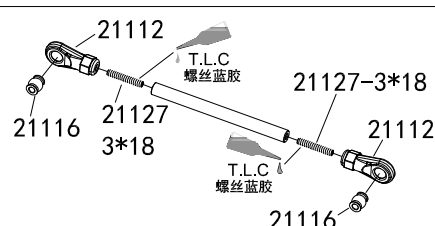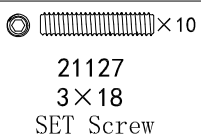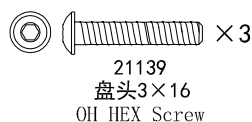



Gearbox Assembly

   波箱组装

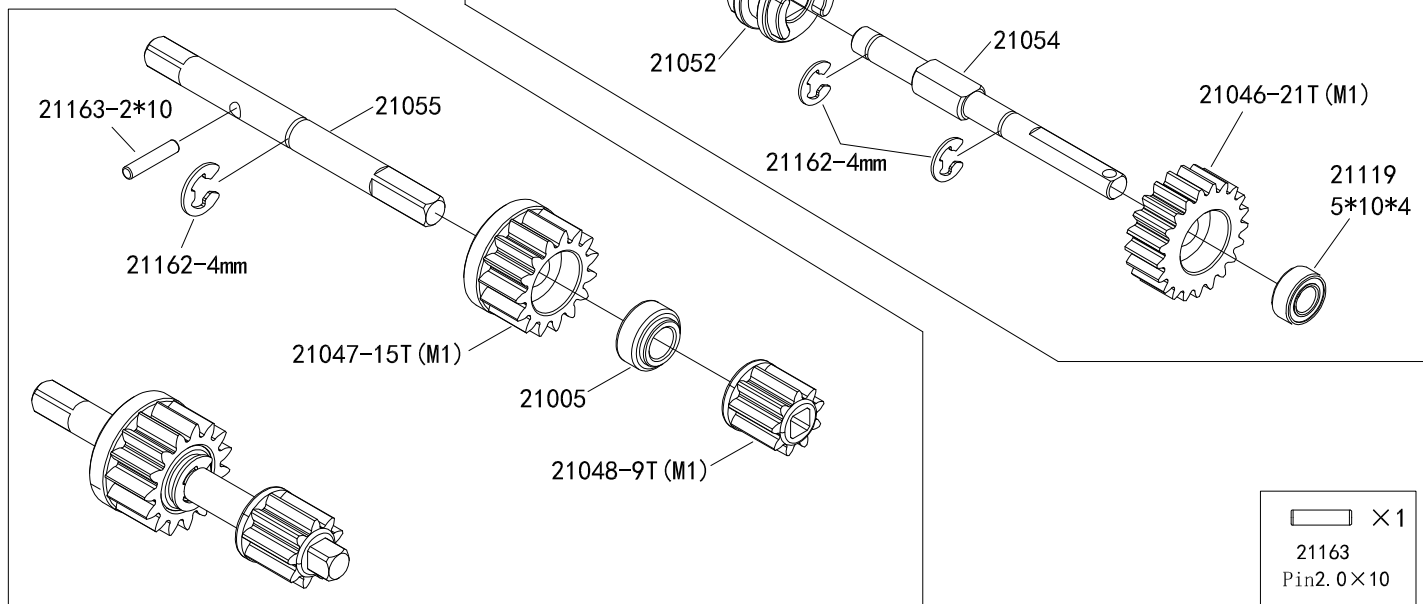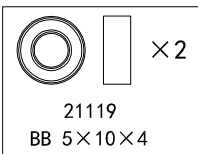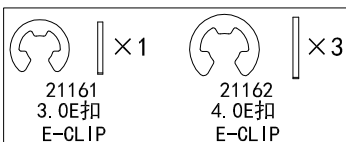



Gearbox Assembly

  波箱组装

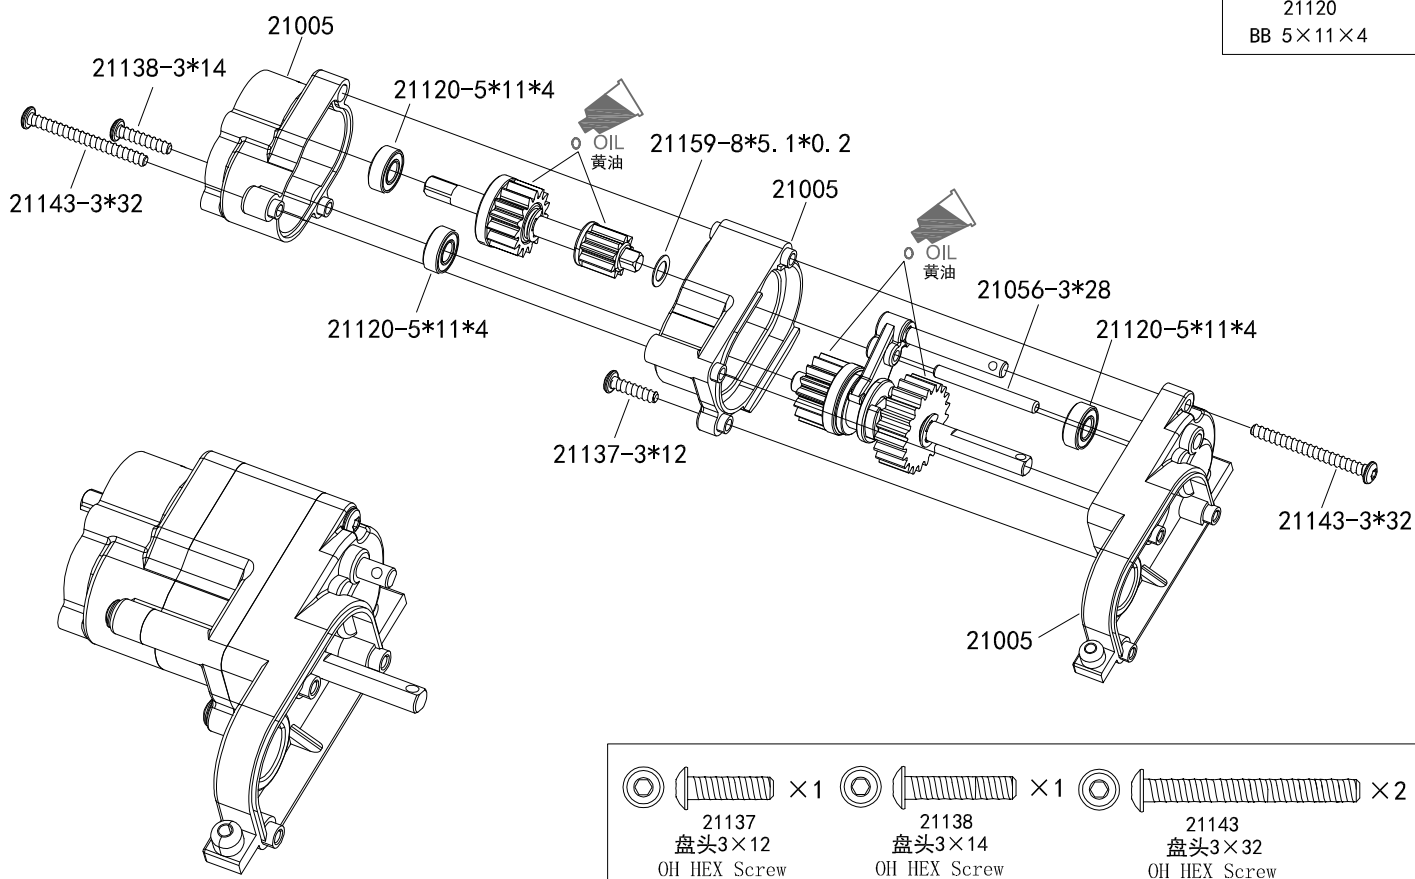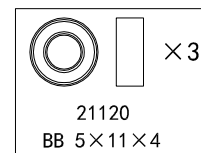




Gearbox Assembly

  波箱组装

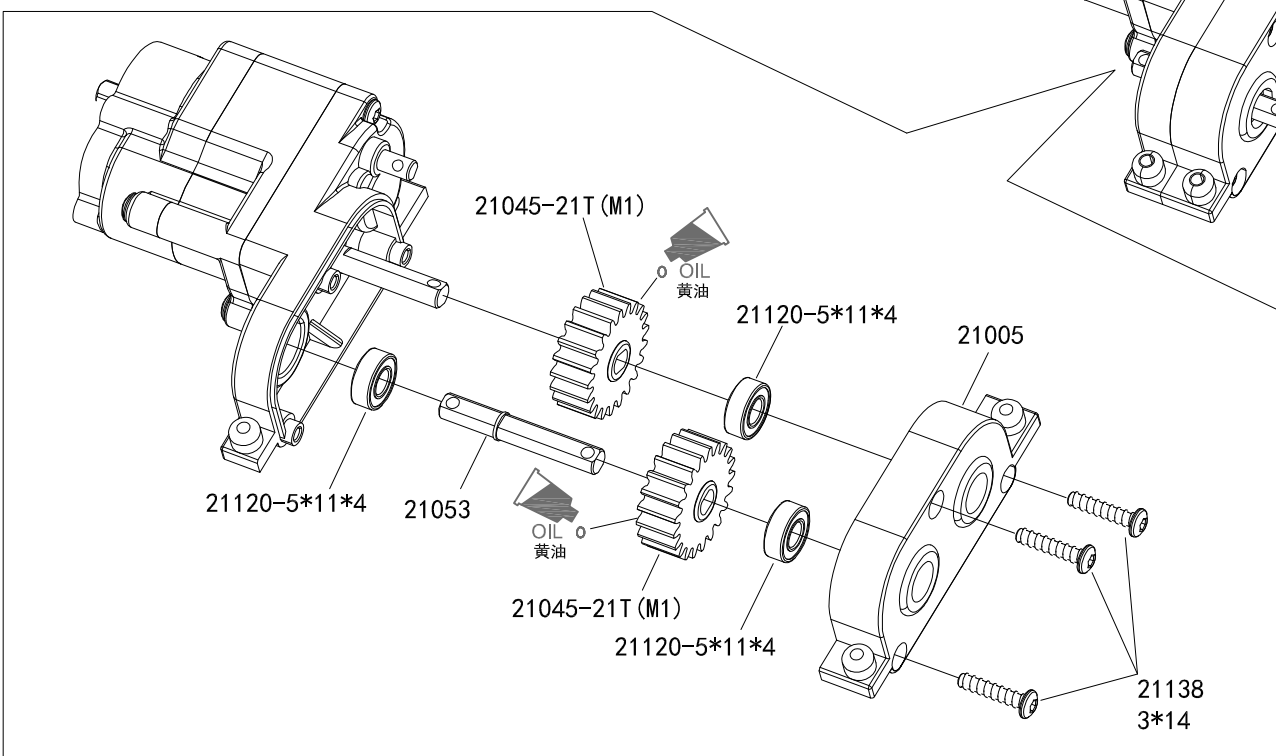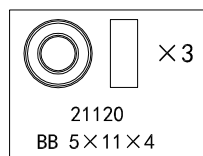




Gearbox Assembly

   波箱组装

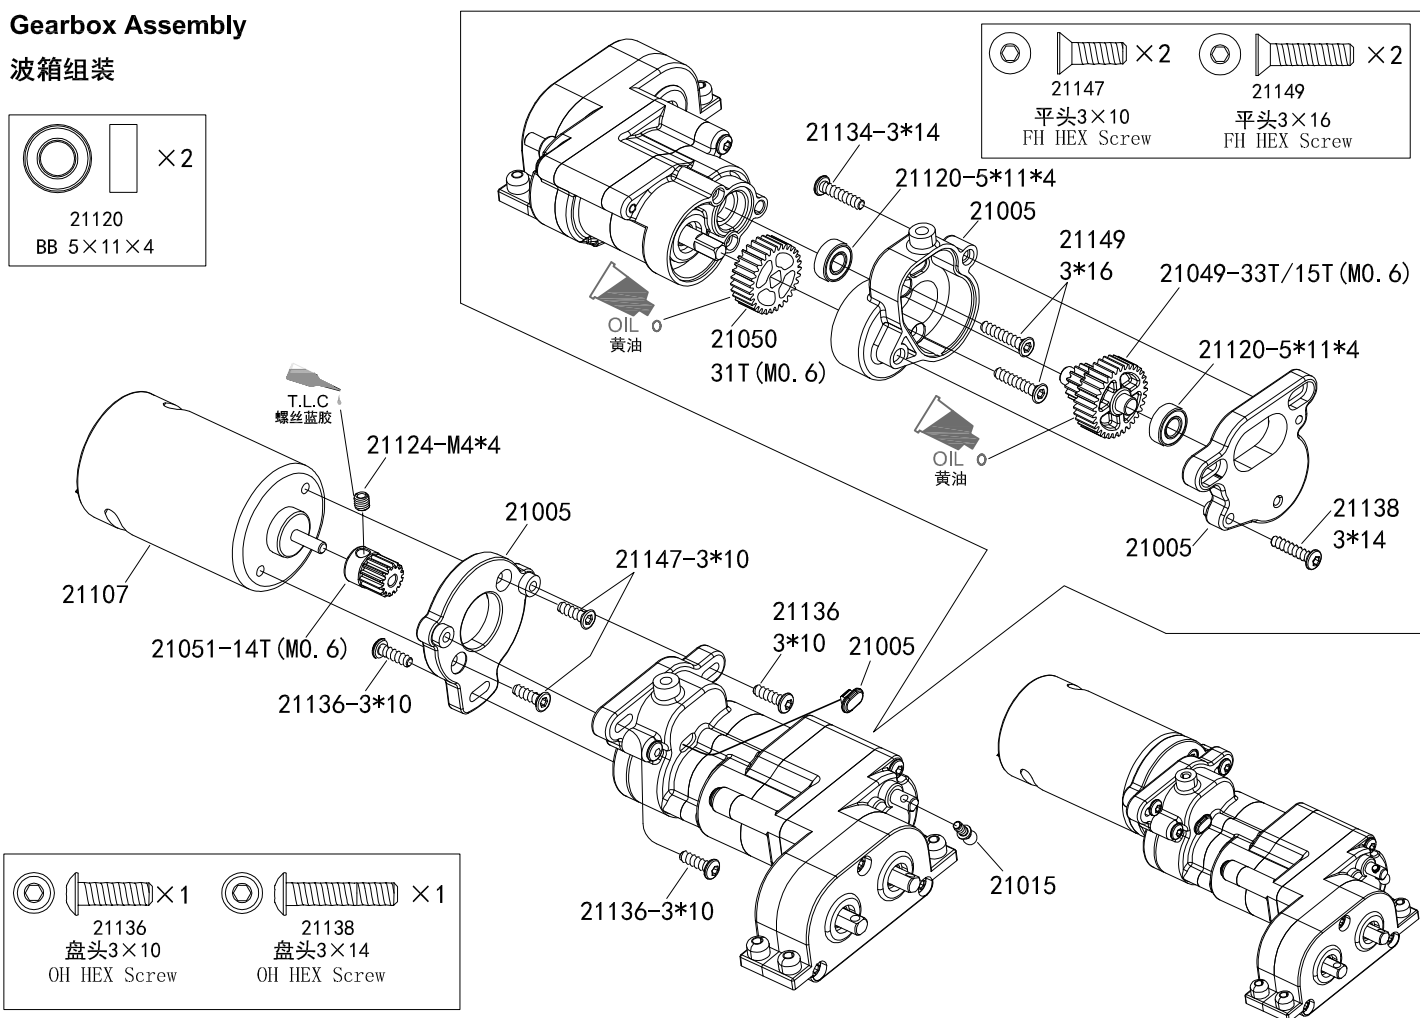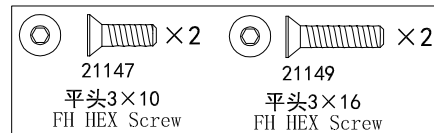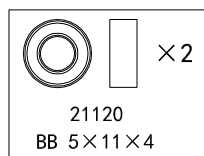




Differential lock servo assembly

   差速锁舵机组装

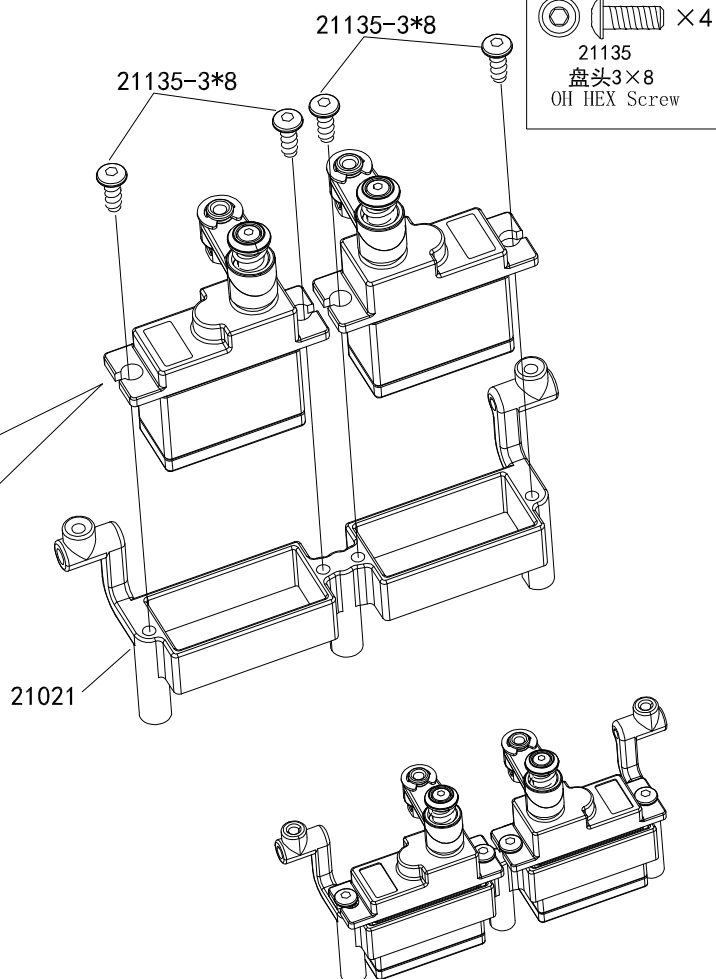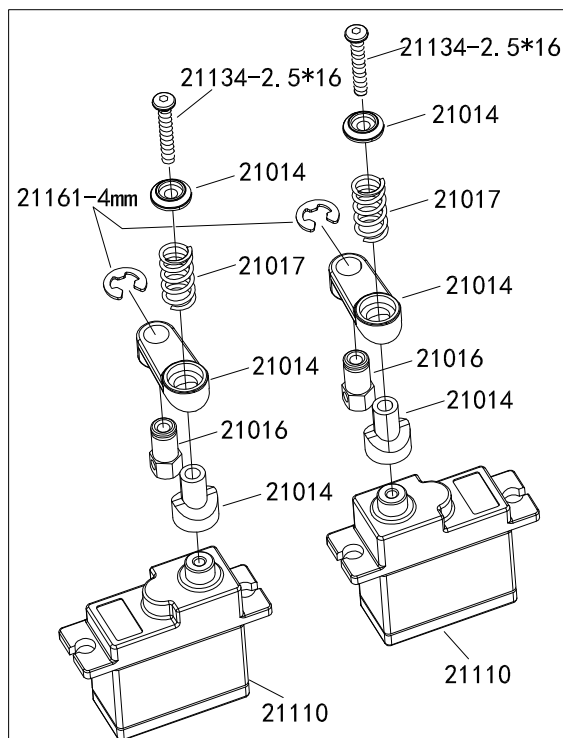


Chassis Assembly

   车架中段组装

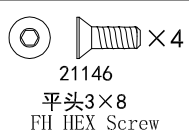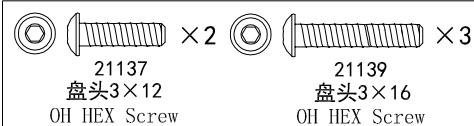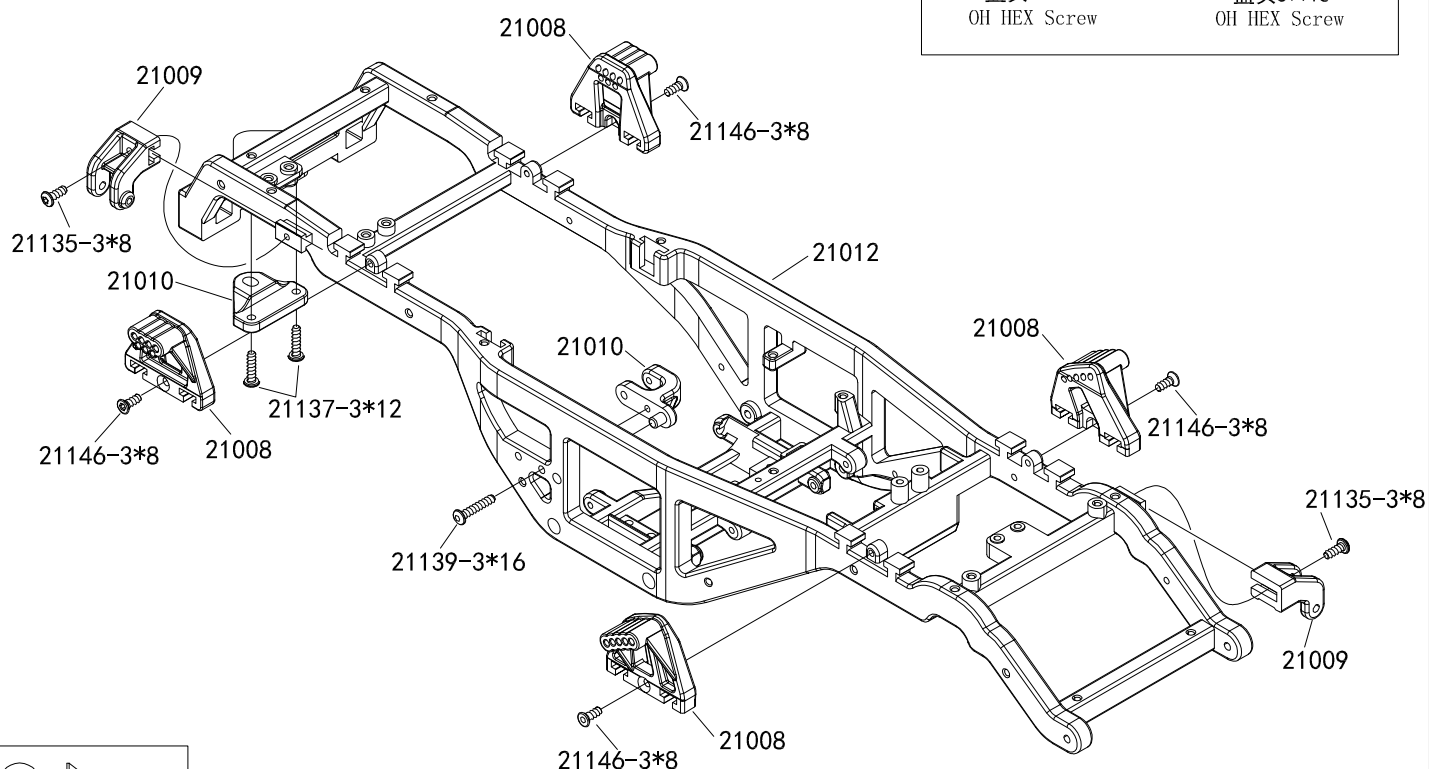


Chassis Assembly

 车架中段组装

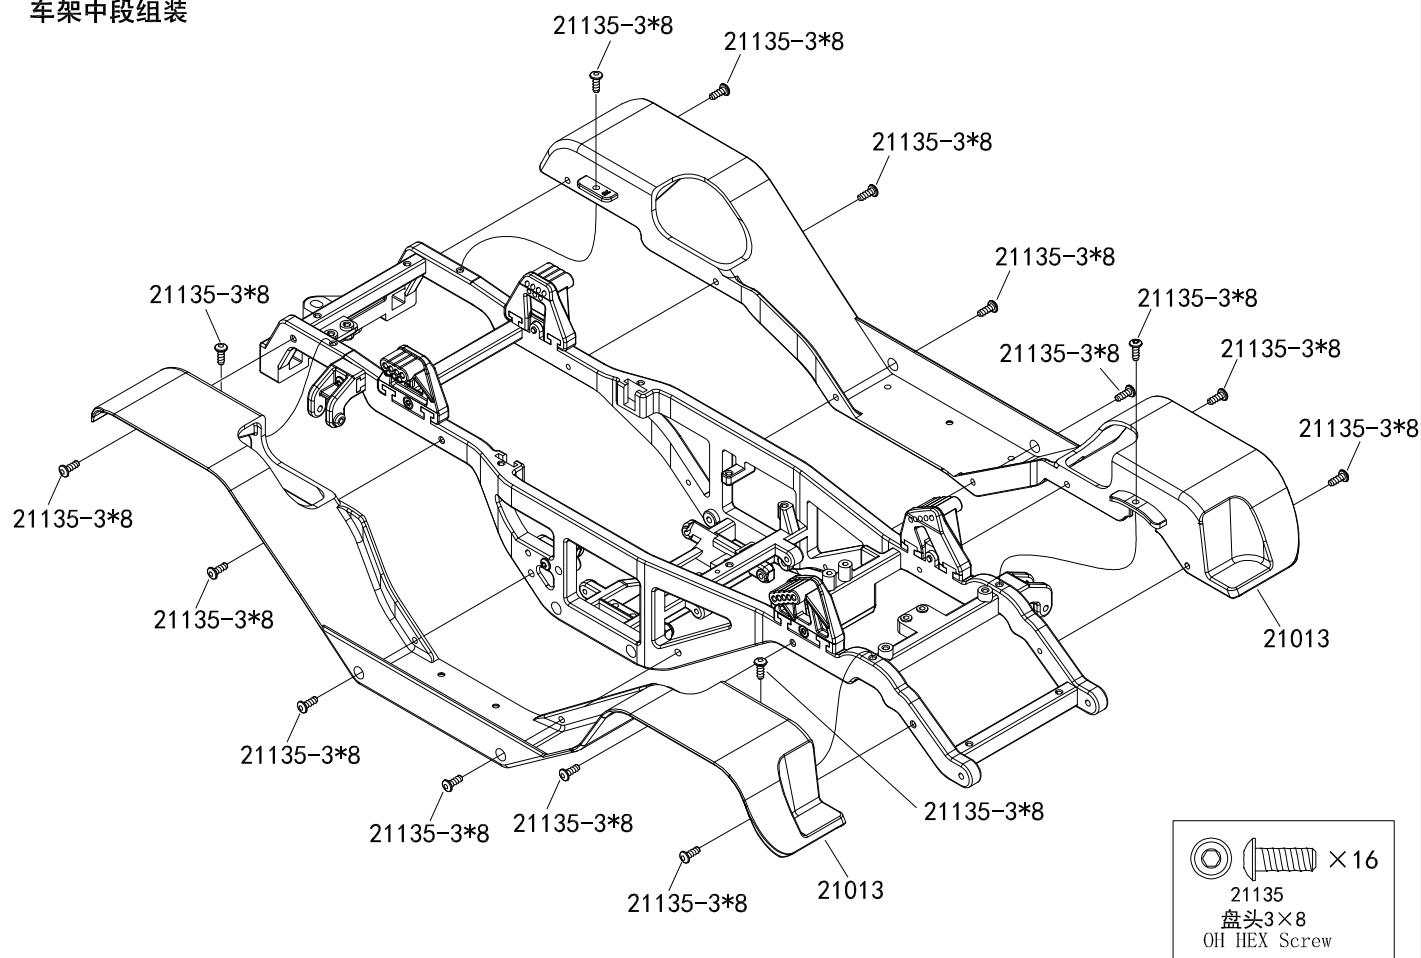



Chassis Assembly

 车架中段组装

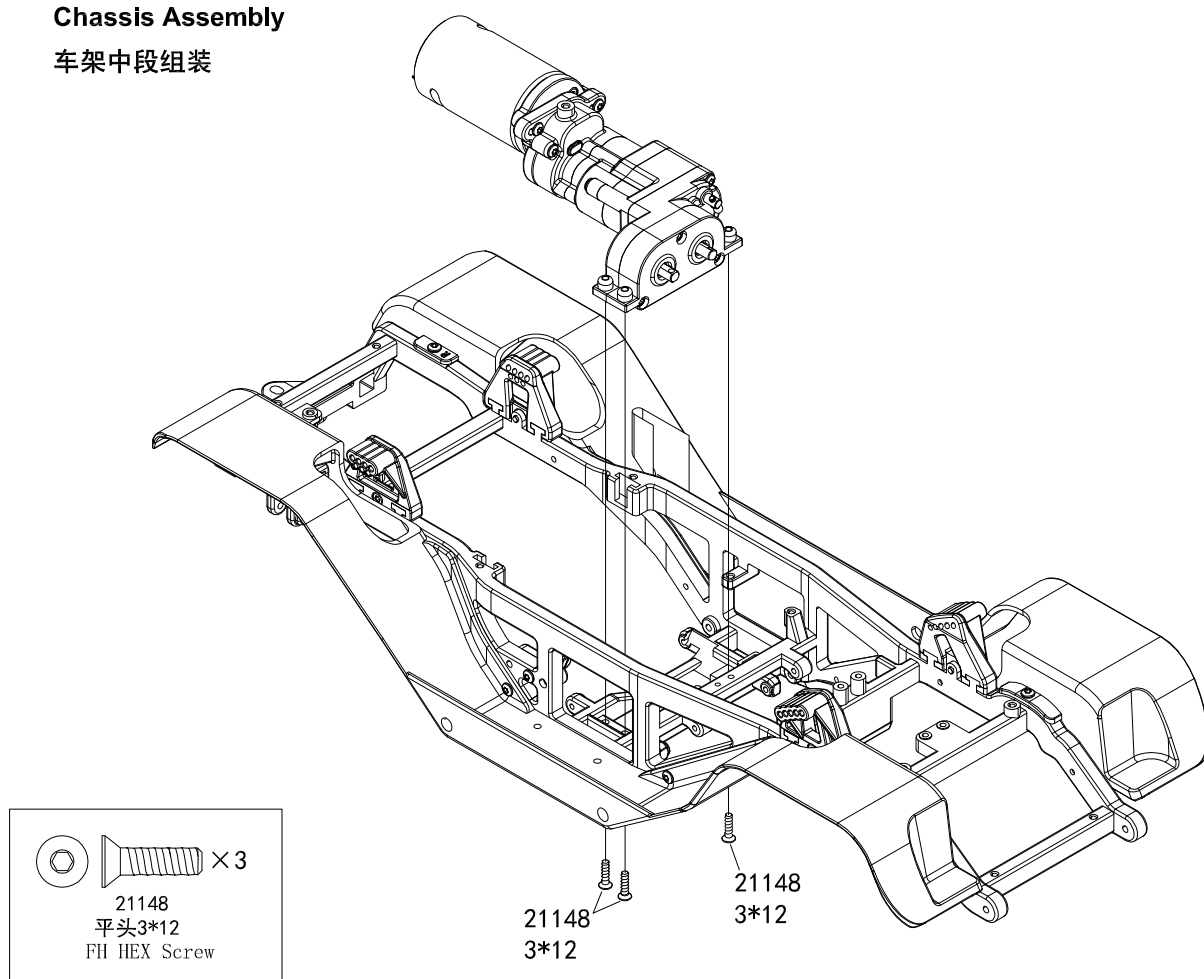



Chassis Assembly

  车架中段组装

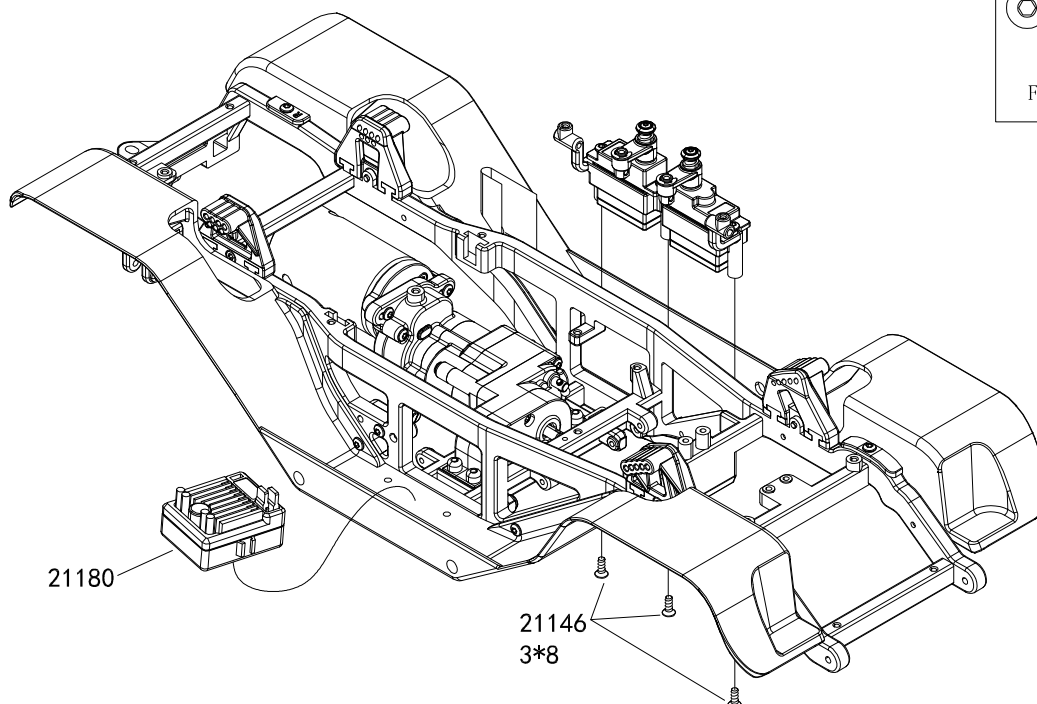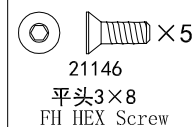


Chassis Assembly

  车架中段组装

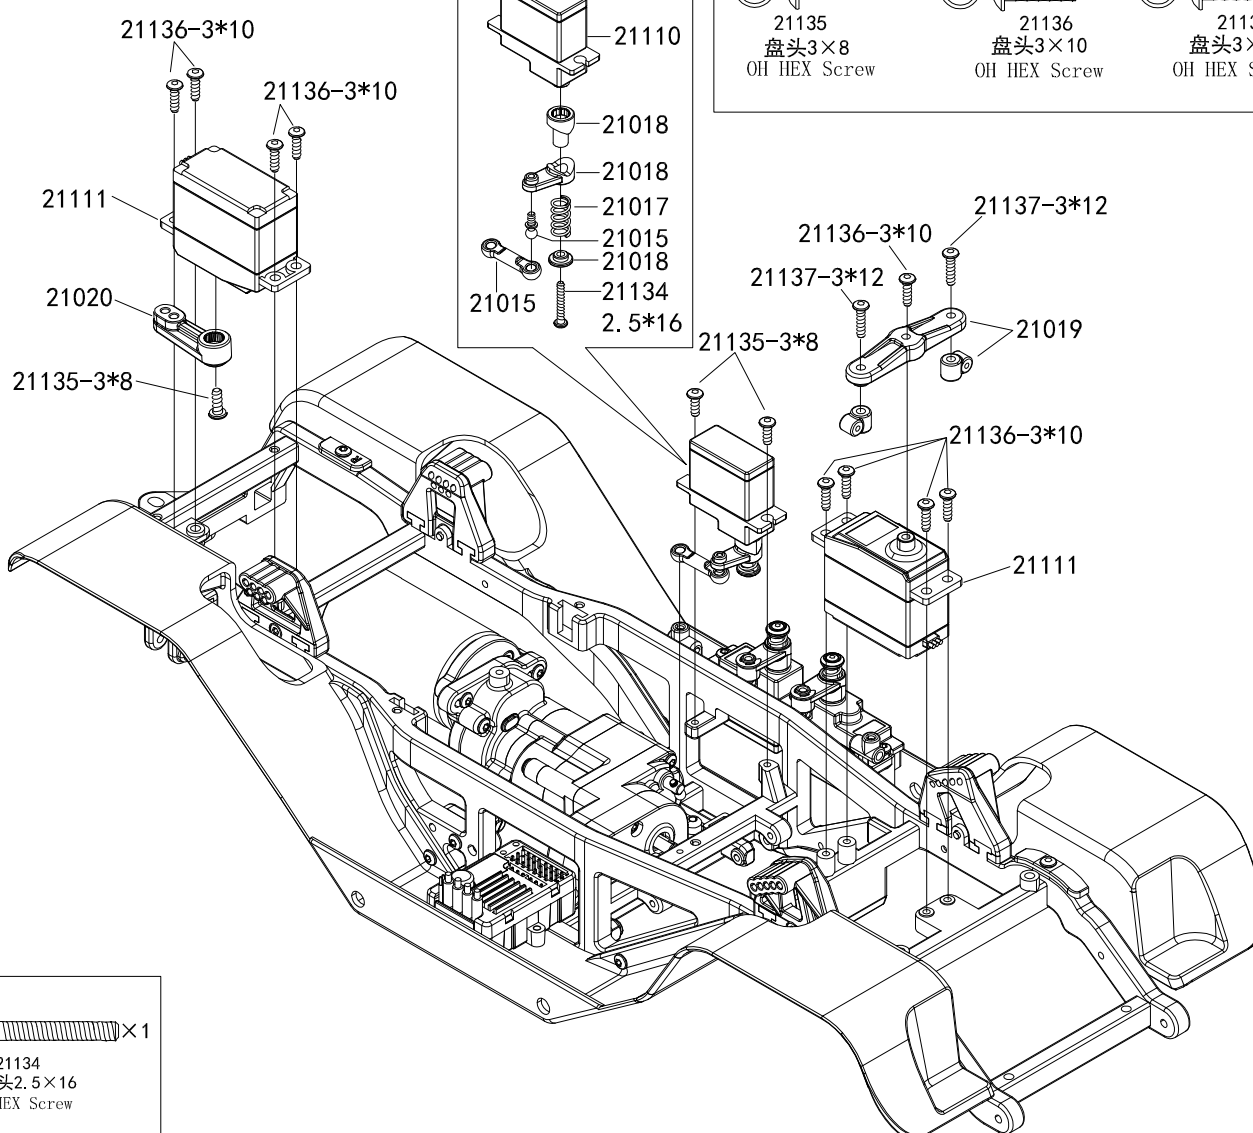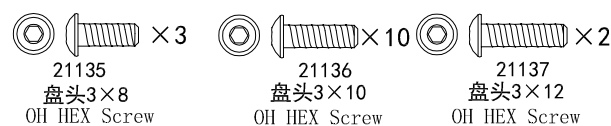


Vertical universal shaft assembly

 纵万向轴组装 前/后

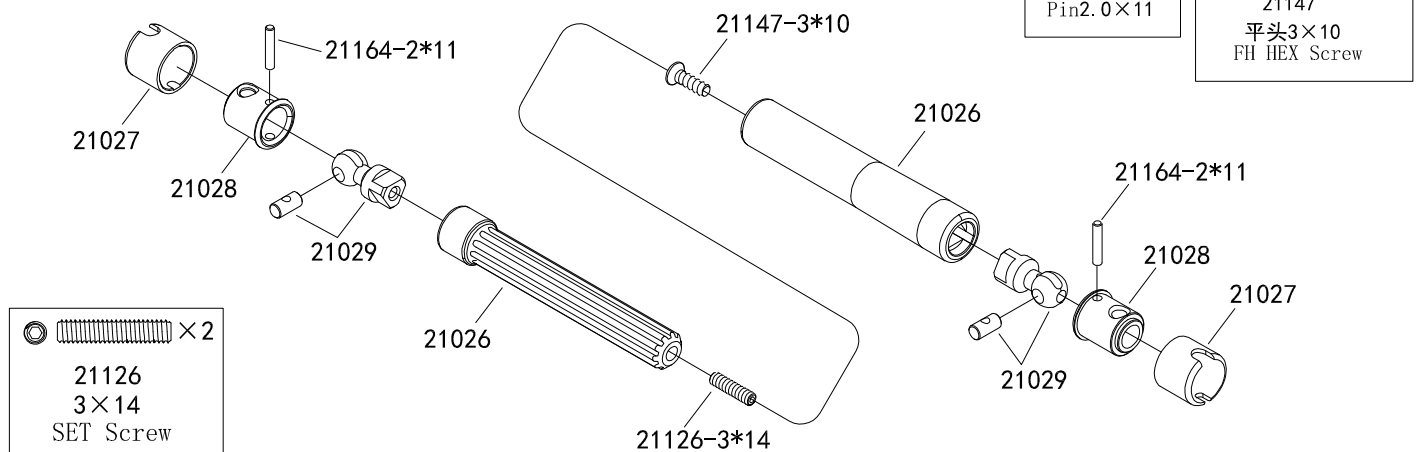

Modular Assembly

 前后桥总组装


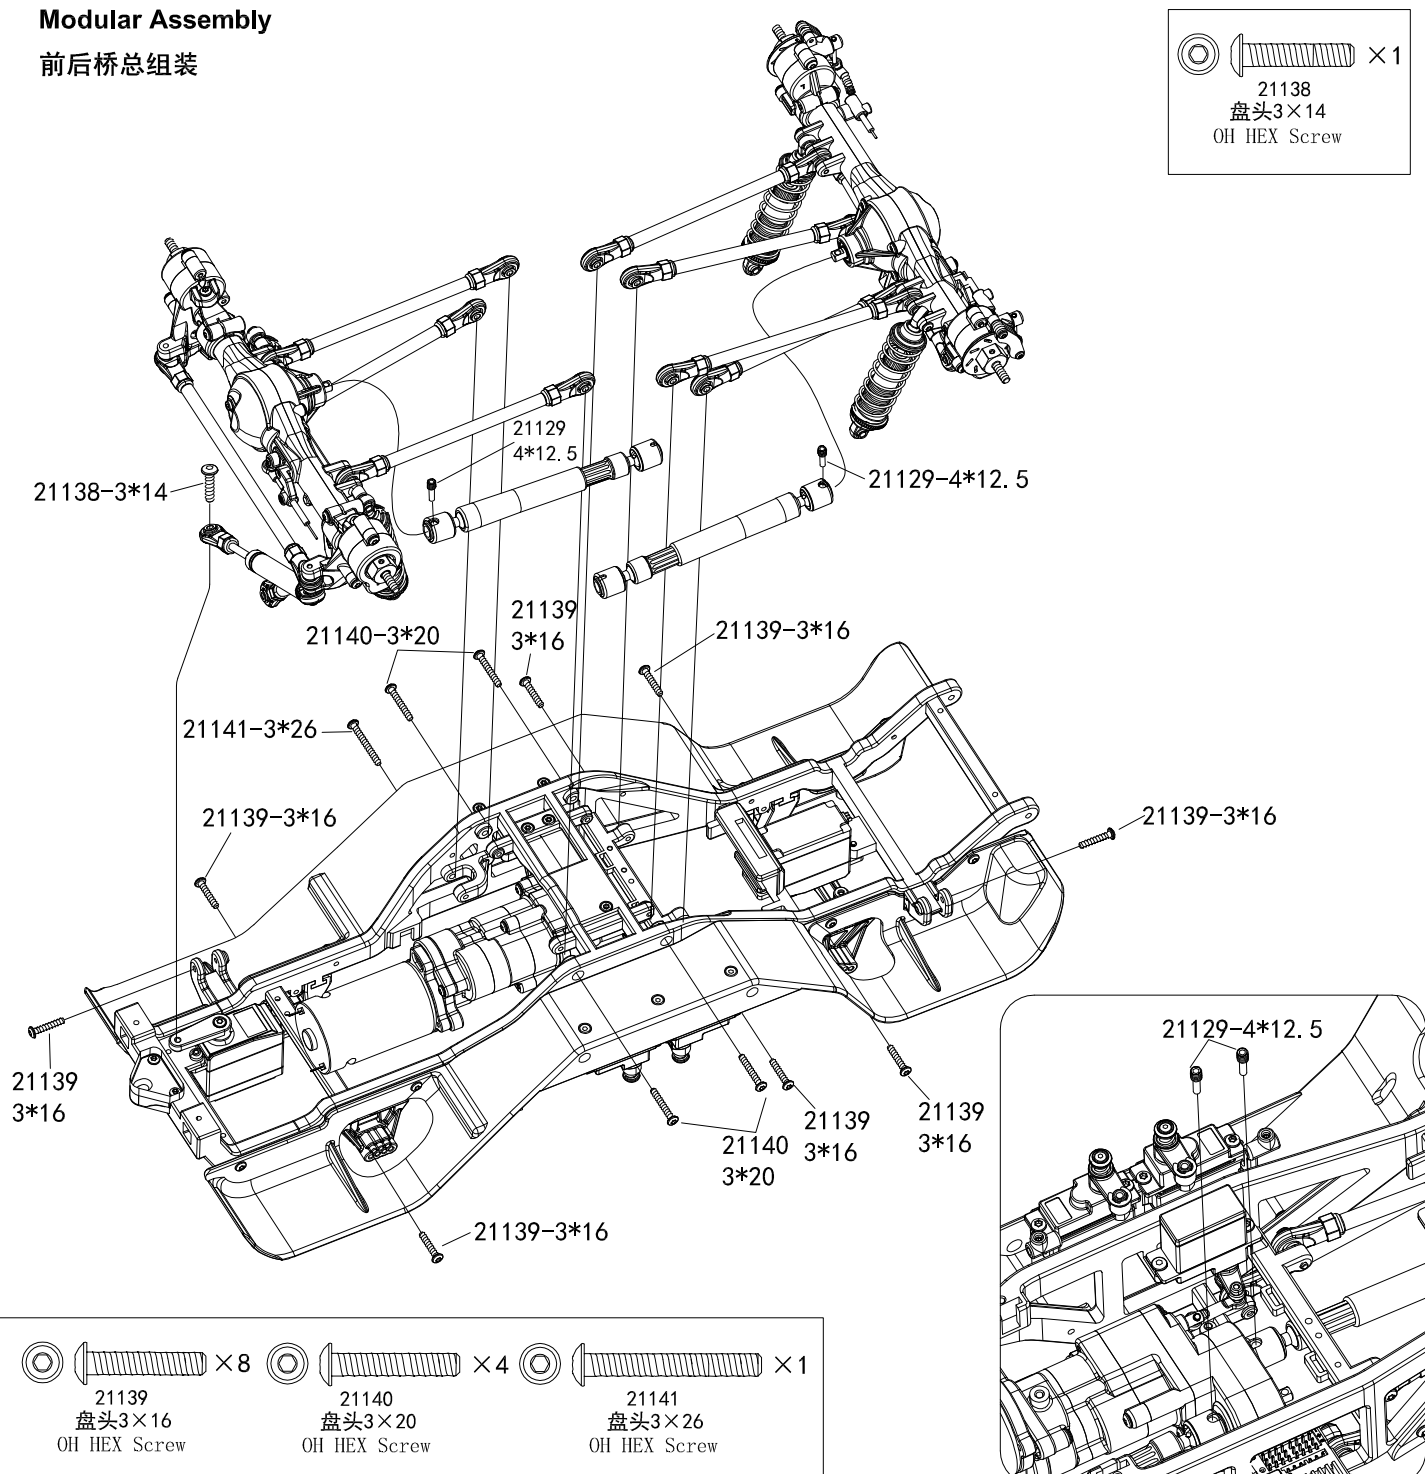


Battery box assembly

电池盒组装



如果使用更小体积电池，可通过安装固定座，来缩小电池仓尺寸，防止电池前后移动而损坏。

  Battery compartment can be adjusted by the mount to hold the short size battery in case your battery is damaged due to move back and forth.

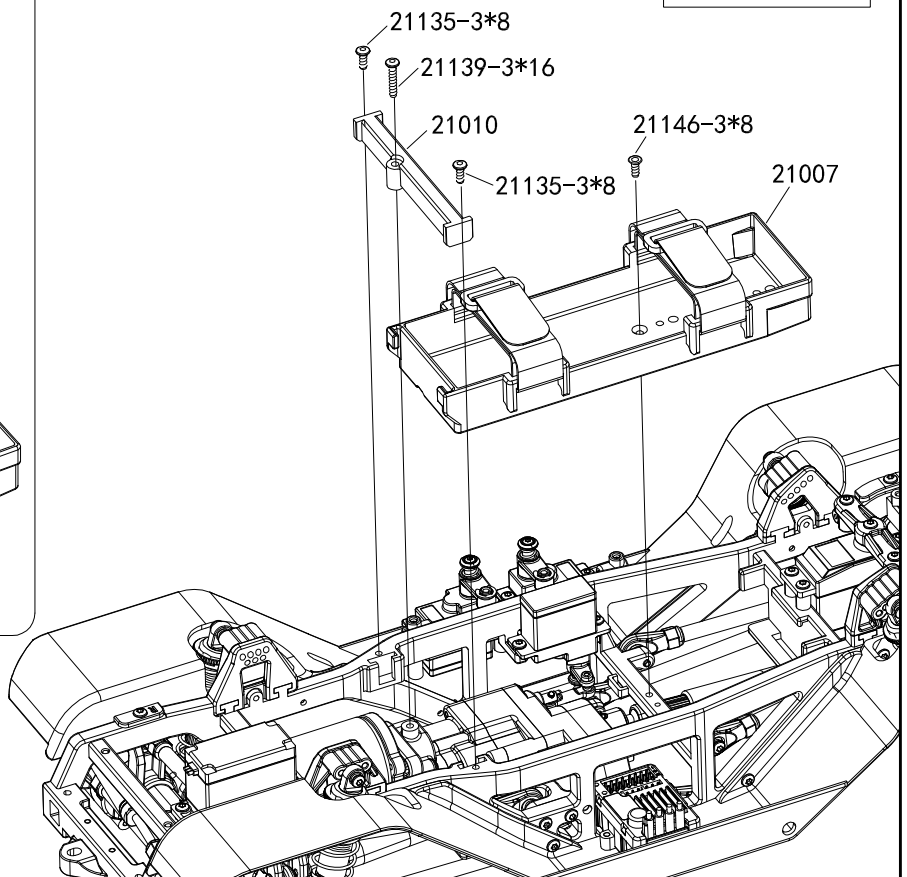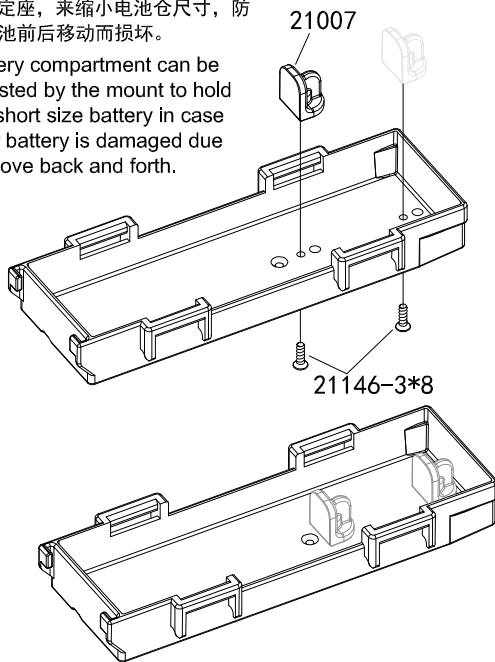


Differential lock wires fixure

  差速锁拉绳安装

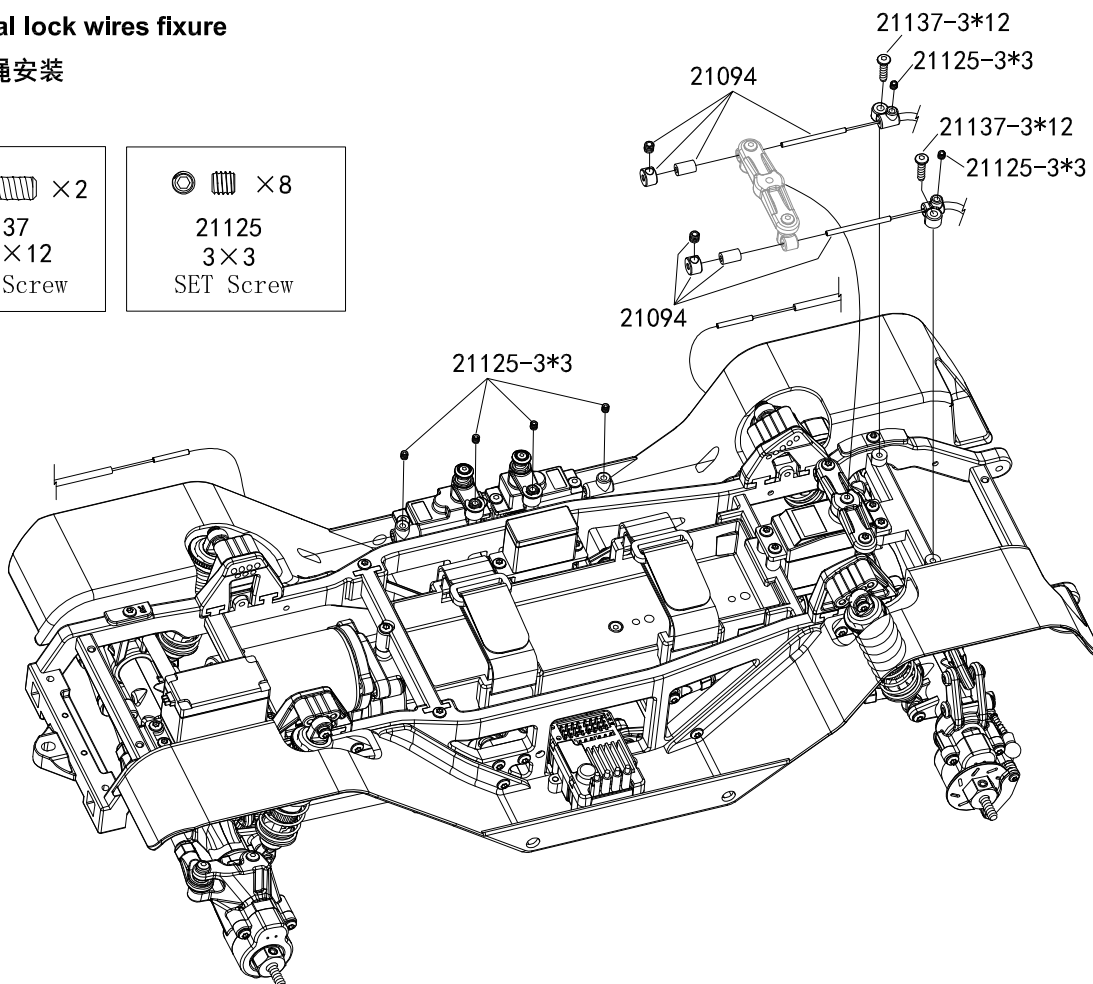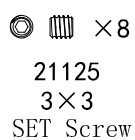


LED lights Assembly

 车灯组装

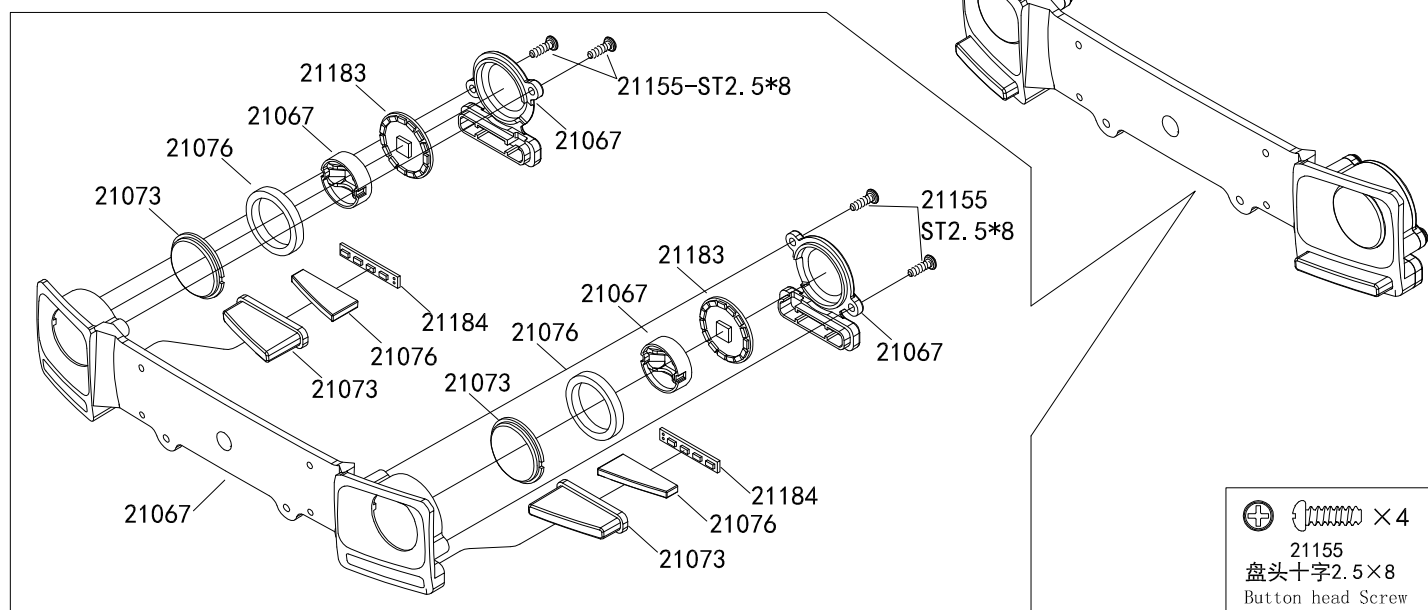


LED lights Assembly

 车灯组装

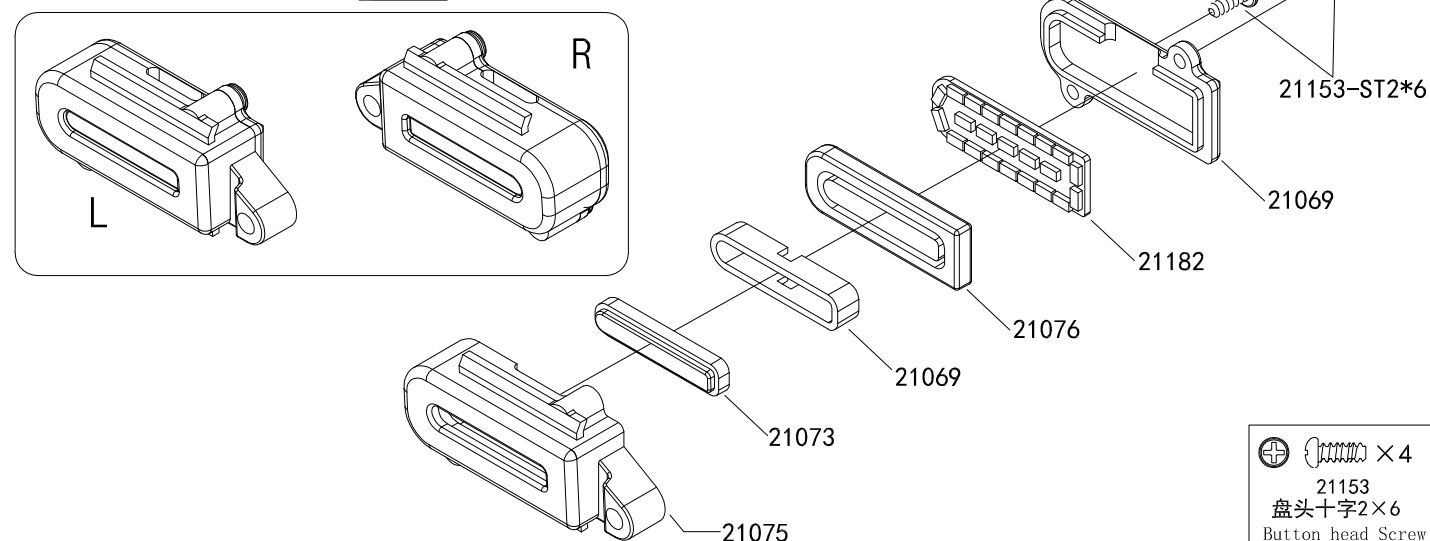


LED lights Assembly

 
车灯组装

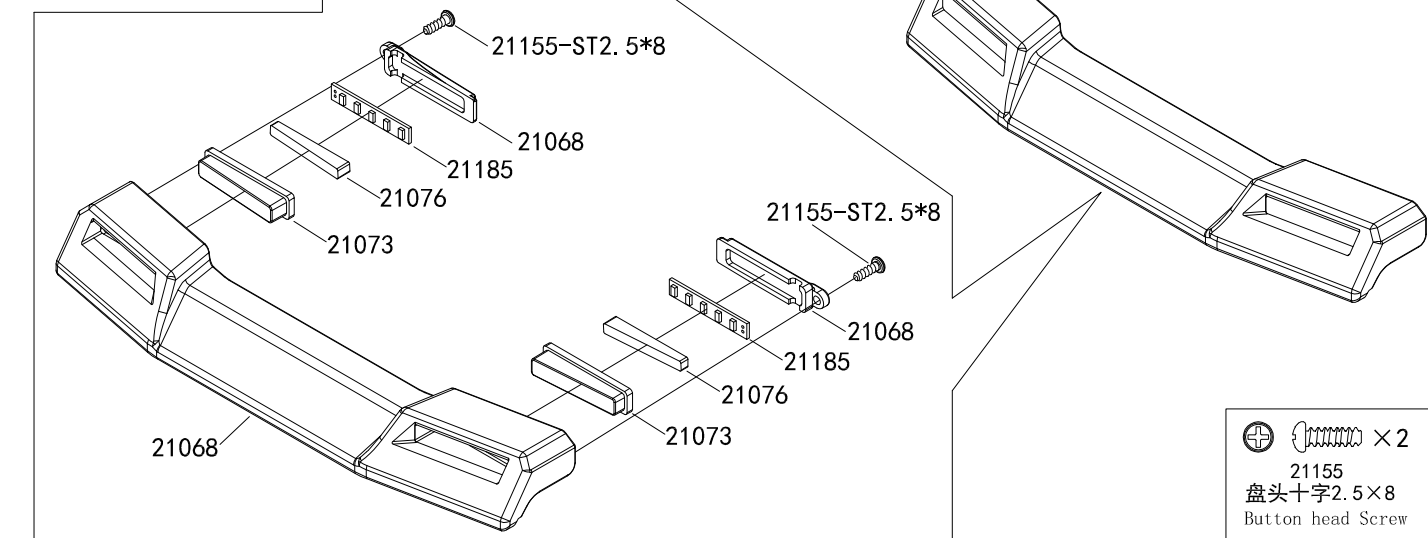


车灯组装

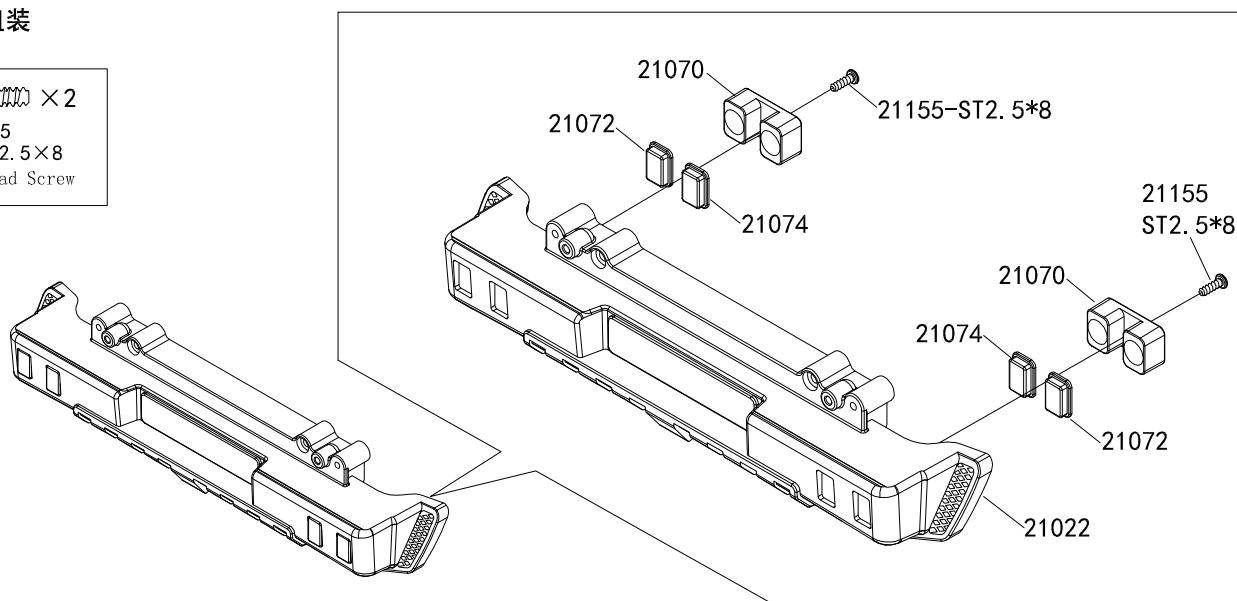 



驾驶舱组装

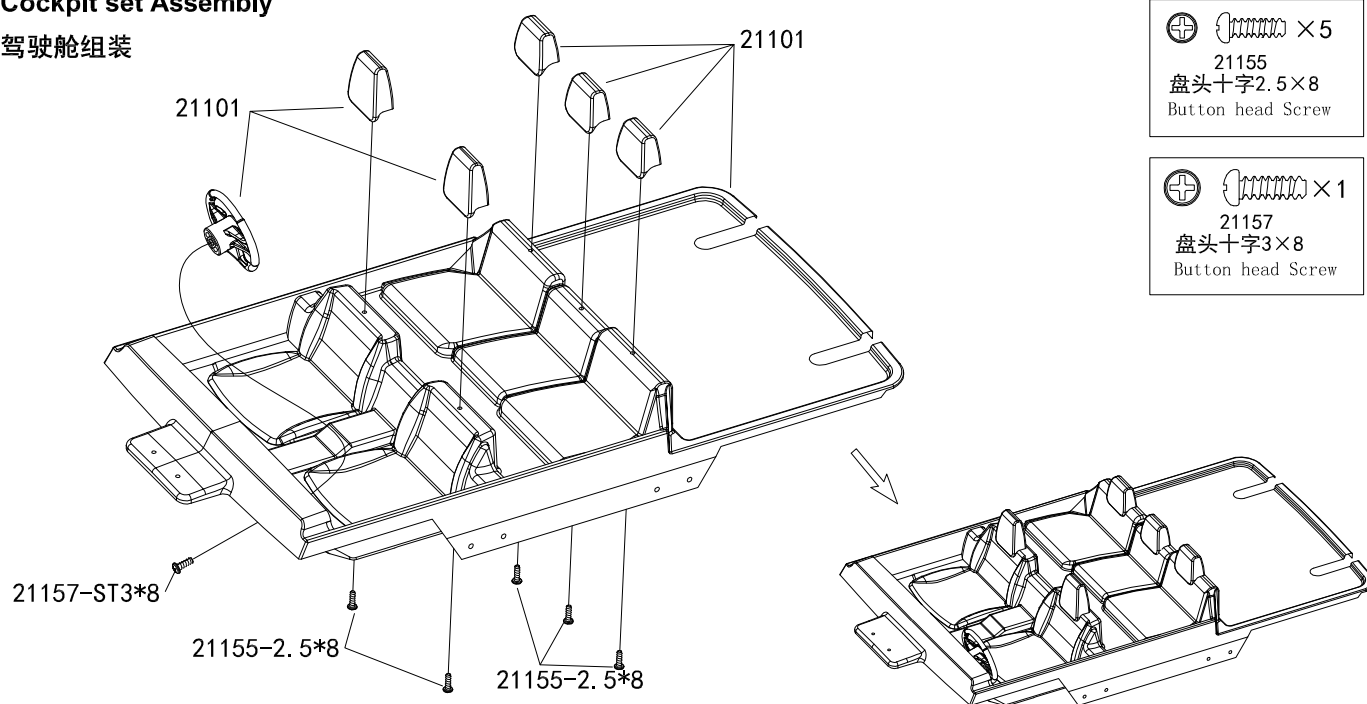 

轮胎组装

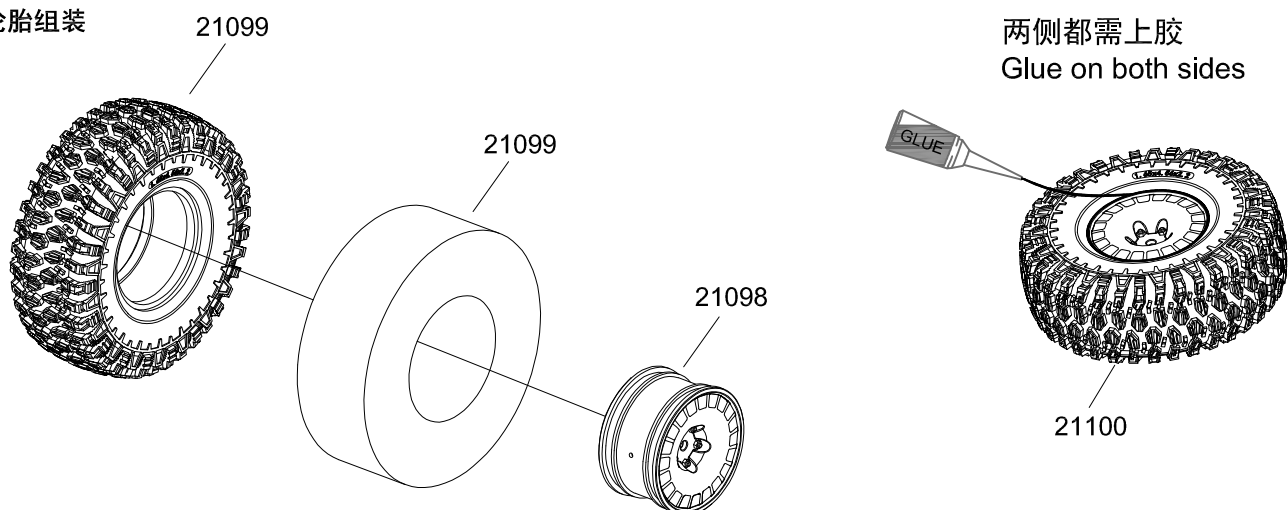 

车壳组装

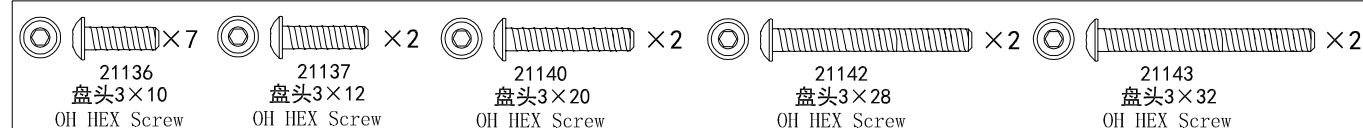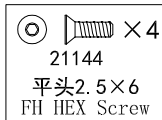  


车壳组装




Tires Assembly

 轮胎安装

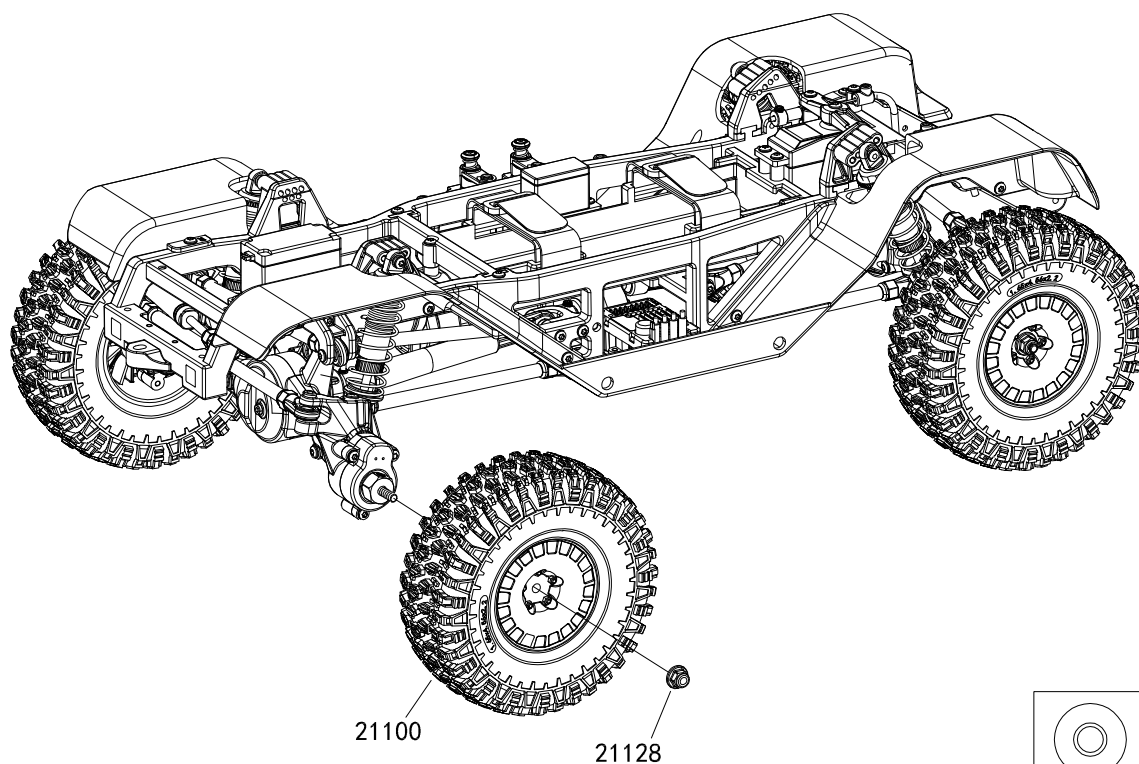


Body Assembly

 车壳组装

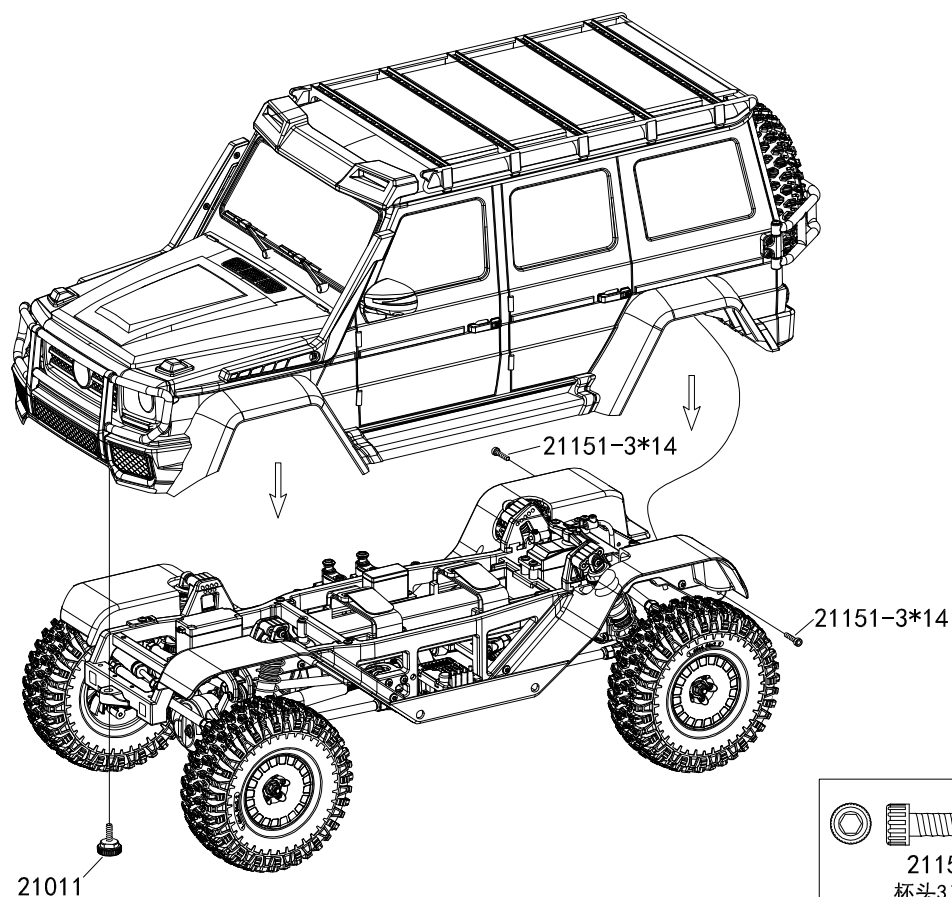


Front Bumper Replacement Installation

 前防撞架更换安装

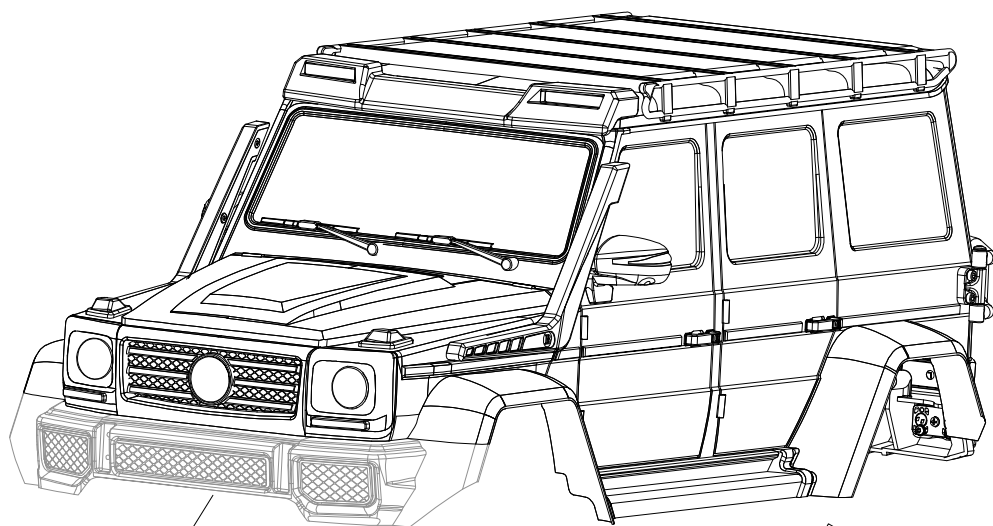


 如果需要获的更大的接近角和更好的通过性，可以修剪掉图中车壳阴影部分，并更换前防撞架来实现。
If customer wants a larger approach angle and improved off-road capability, consider trimming the front shaded area as shown in the image, and replace it with a new front bumper.

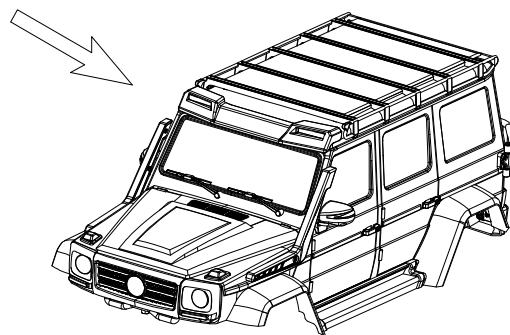


Front Bumper Replacement Installation

 前防撞架更换安装

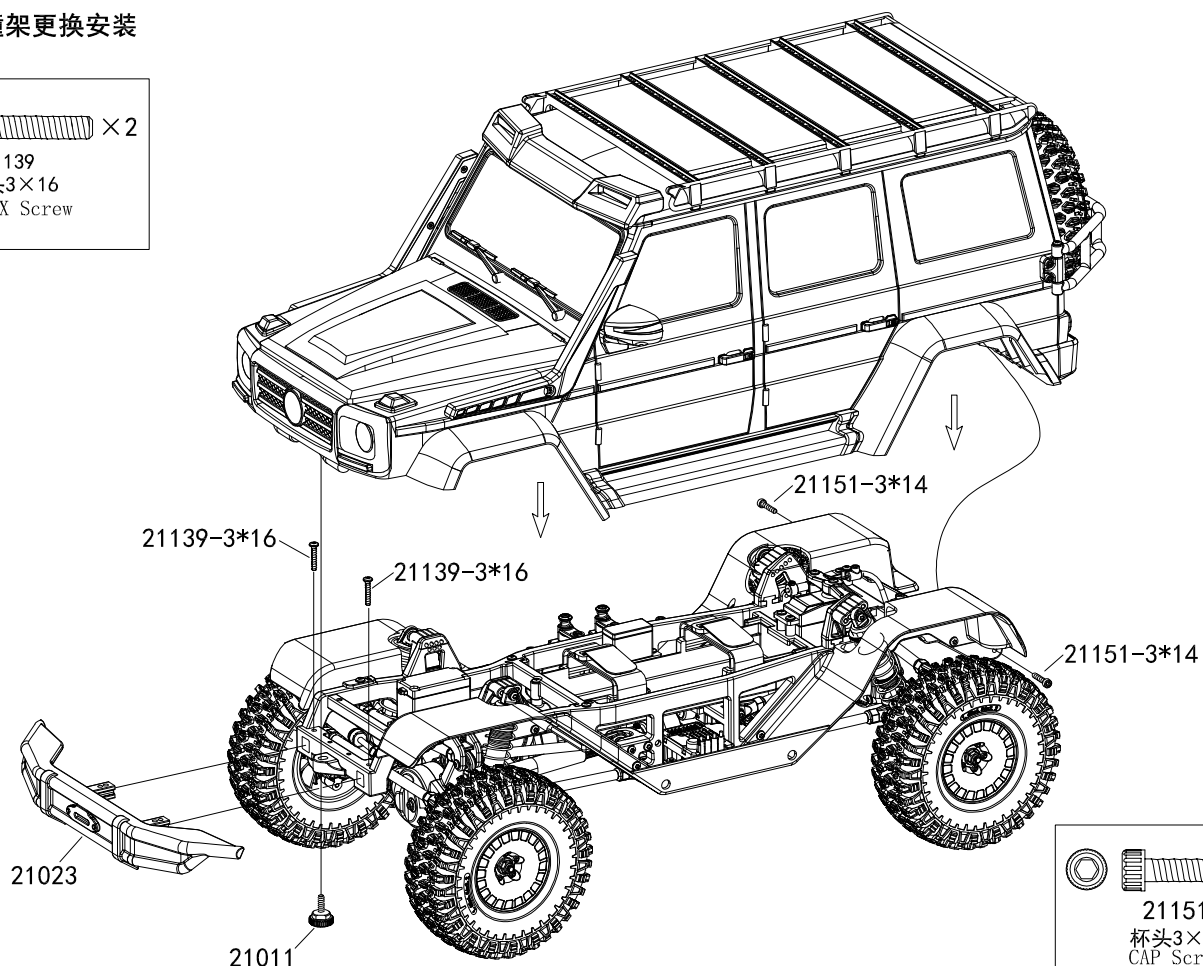


配件表 Parts List

 21000

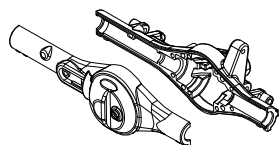


前桥管
Front Portal Housing

 21001

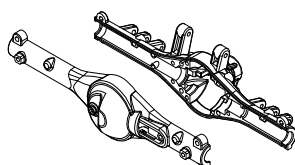


后桥管
Rear Portal Housing

 21002

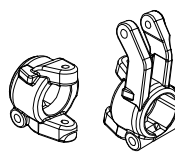


C座
C Hub set

 21003

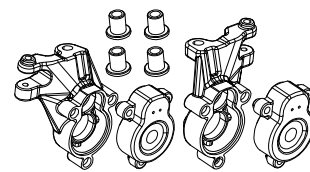


转向座左/右
Spindle Lefts/Right

 21004

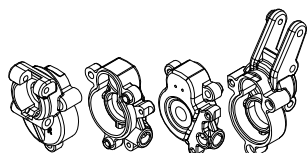


后轮轴座
Rear Hub

 21005

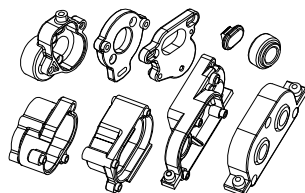


减速箱
Transmission Gearbox

 21006

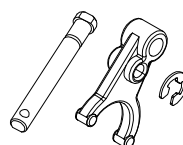


高低速拨叉
Speed Conversion Paddles

 21007

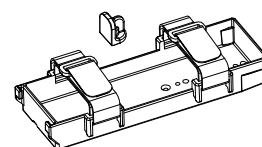


电池盒
Battery Case

 21008

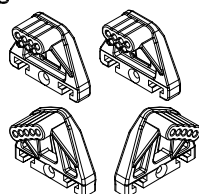


避震架
Shock Absorber Mount

 21009




止推杆固定座
Panhard Bar Mount

 21010

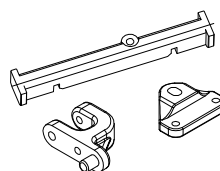


大梁支撑/固定座
Chassis Frame Support/Mount

 21011




车壳固定螺帽
Body Shell fixing bolt

 21012

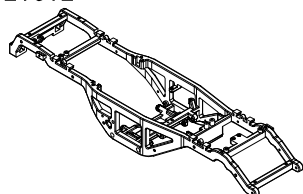


大梁
Chassis Frame

 21013

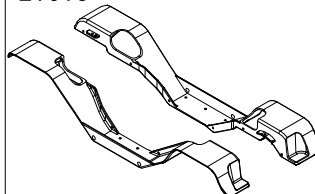


左右侧板
Left and Right Guard Board

 21014




差速锁伺服臂组
Differential lock Servo Horn set

 21015

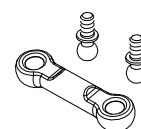

高低速球头拉杆
High-Low speed pull rod link

 21016




拉线固定座
Differential Lock Wire Fixed Post

21017




舵保弹簧
Servo Saver Spring

 21018

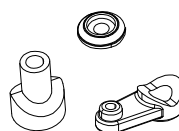

高低速伺服臂
High-Low Speed Servo Horn

 21019

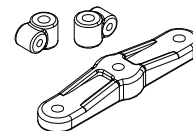


后刹车伺服臂
Rear Brake Servo Horn

21020




转向伺服臂25T
Steering Servo Horn 25T

 21021

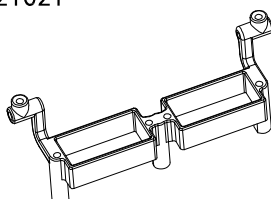


差速锁舵机座
Differential Lock Servo Mount

 21022

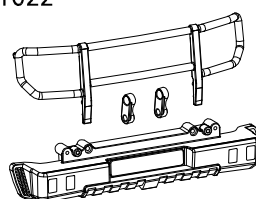

前/后防撞架
Front And Rear Bumper

 
21023

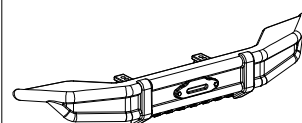

前防撞架(改装件)
Front Bumper (modified part DIY)


配件表 Parts List

 21024

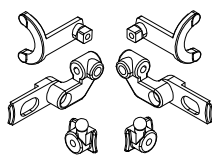


差速锁配件组
Differential Lock Accessory set

 21025

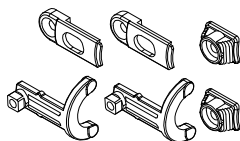


手动差速锁配件组
Hand Diff Lock Accessory set

 21026

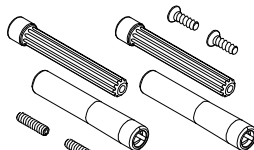


纵万向轴
Plastic Vertical Universal Shaft

 21027

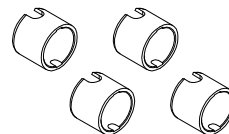


纵万向轴套
Center Universal Drive shaft Bushing

 21028

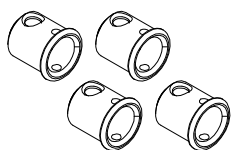


纵万向接杯
Center Universal Drive Cup

 21029

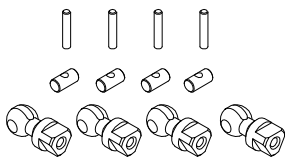


纵万向接头
Center Universal Joint Coupler

 21030

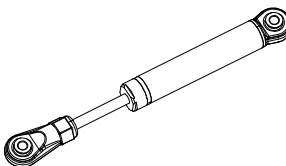


转向减震器
Steering Shock Absorber

 21031




差速壳
Differential Case

 21032

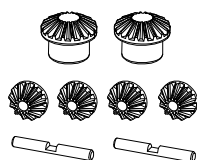


差速齿轮组18T/13T
Differential Gears

 21033




从动齿轮34T
34T Gear

 21034

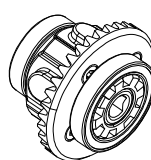


差速器
Differential Set

 21035

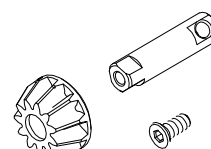


主动齿轮11T
11T Gear

 21036




差速锁块
Differential Lock Mounting

 21038

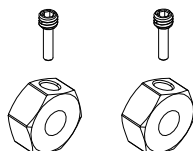


六角轮座-前
Front Wheel Hex

 21039

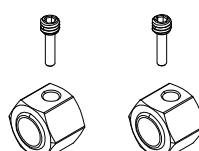


六角轮座-后
Rear Wheel Hex

 21040

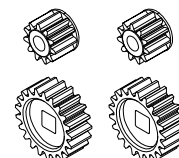


门桥齿轮11T/21T
Portal Axle Gears 11T/21T

 21041




输出轮轴-前
Front Portal Axle Output Shaft

 21042




输出轮轴-后
Rear Portal Axle Output Shaft

 21043

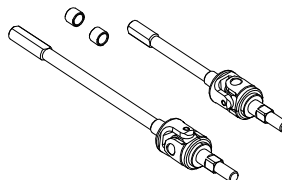


横万向传动轴
Horizontal Universal Shaft

 21044

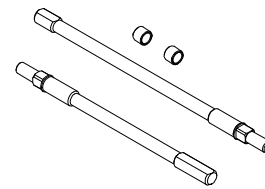

后直轴
Rear Straight Axle Shaft

 21045




波箱齿轮21T-M1.0 (扁孔)
Gearbox 21T Gear

21046




波箱齿轮21T-M1.0 (圆孔)
Gearbox 21T Gear

 21047



波箱齿轮15T-M1.0
Gearbox 15T Gear

 
21048



波箱齿轮9T-M1.0
Gearbox 9T Gear


配件表 Parts List

 21049




波箱齿轮33T/15T-M0.6
Gearbox 33T/15T Gear

 21050




波箱齿轮31T-M0.6
Gearbox 31T Gear

 21051




马达齿14T-M0.6
14T pinion Gear

 21052




高低速换挡锁块
Speed Conversion Lock Block

 21053




波箱输出轴
Gearbox Output Shaft

 21054

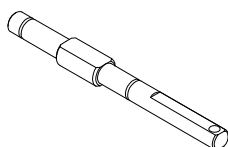


波箱变速轴
Gearbox speed shift shaft

 21055

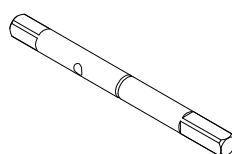


波箱二级减速轴
Gearbox Secondary Reduction Shaft

 21056




波箱销子3*28
Pins for Gearbox 3*28

 21057

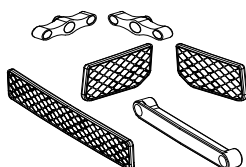


车壳前进气格
Body front Air Intake Grille

 21058

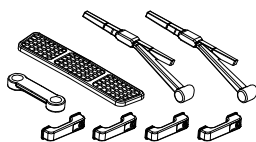


车壳配件组
Body Hardware parts

 21059

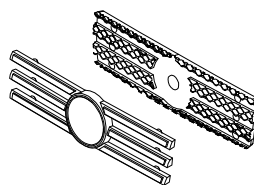


车壳中网
Body Front Mesh Grille

 21060

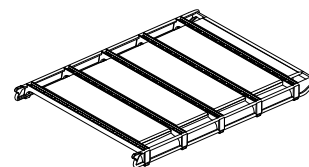


车顶行李架
Roof Rack

 21061




车壳后支撑柱
Body Rear Support Post

 21062

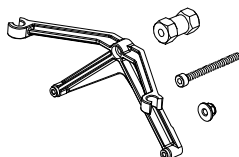


车壳中支撑
Body Middle Support

 21063

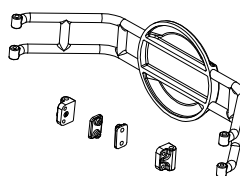


备胎架
Spare Tire Rack

 21064

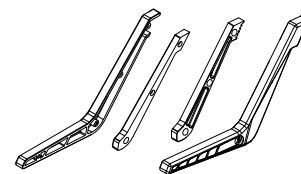


水喉
Wading Hose

 21065

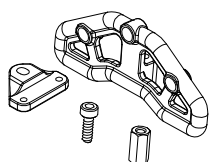


车壳前固定架
Front Body Bracket

 21066




后视镜
Rear view mirror

 21067

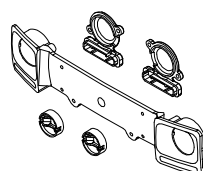


前大灯杯
Headlight lampshade

 21068

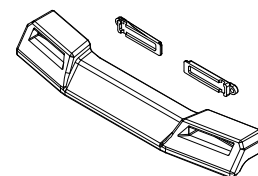


车顶灯
Roof Light

 21069

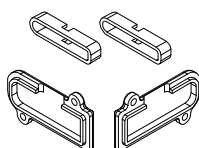


尾灯盖
Tail light Cover

 21070




防撞架灯杯
Light Bucket for bumper

 21071

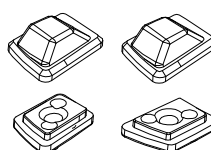

机盖灯罩
Hood Lampshade

 
21072



防撞架灯罩(透明)
Bumper Light Cover (Clear color)


配件表 Parts List

 21073




灯罩
Lights Cover

 21074




防撞架灯罩 (红)
Bumper Light Cover (Red color)

 21075




尾灯罩
Tail Light Cover

 21076

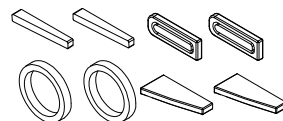


车灯导光条
Light Guide Strip

 21083




上拉杆-70mm
Camber Link

 21084




止推杆-90mm
Sway Bar

 21085

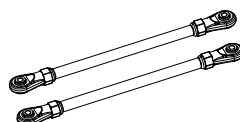


前下拉杆-85mm
Linkage front lower

 21086

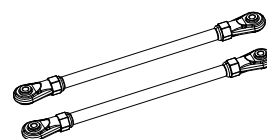

后下拉杆-83mm
Linkage rear upper

 21087




转向拉杆-109mm
Steering Linkage

21088




伺服拉杆
Servo Linkage

 21089

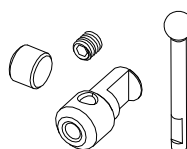

刹车凸轮轴组
Brake Cam Shaft Set

 21090




刹车夹片
Brake Pad Plates

21091




刹车摩擦片
Brake Pad

 21092

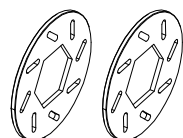


刹车碟
Brake Dis

 21093

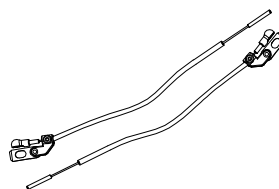


差速锁拉线组
Differential Lock Wiresf

 21094

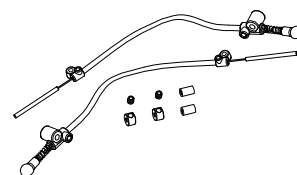

后刹车拉线
Rear Brake Cable

 21095

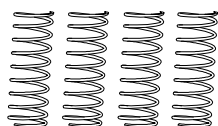


避震弹簧
Shock Absorber Springs

21096




避震轴
Shock Absorber Shaft

 21097

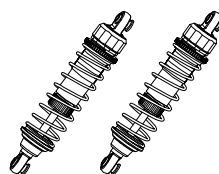


避震器组
Shock Absorber Set

 21098




轮框
Gray Rims

 21099

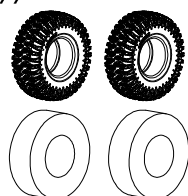


轮胎皮/海绵
Tires/Foams

 21100

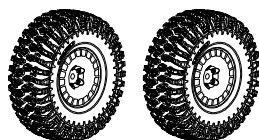


轮胎组
Wheels

 21101

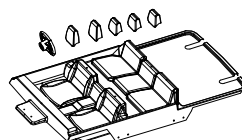

喷漆驾驶舱PC
Paint Driver Insert PC Panel

 
21102

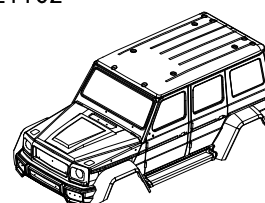

喷漆车壳PC
Body Shell


配件表 Parts List

 21104

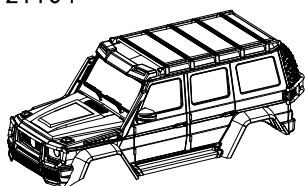


喷油车壳组
Body Assembly

 21107

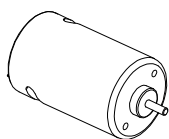


550碳刷马达
Brushed Motor

 21110

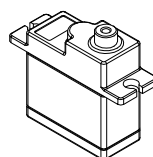


17G舵机
Servo

 21111

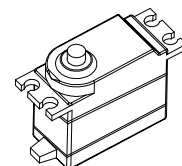

15KG舵机
Servo

 21112

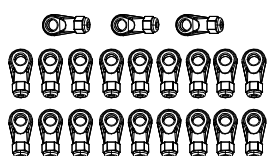


拉杆球头座组
Ball Linkage Ends

21113




转减弹簧
Steering Shock Spring

 21114

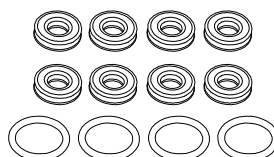


避震器密封圈
Shock Absorber Seal O-Ring X-Ring

 21174

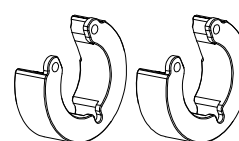


前桥配重
Front Axle Counterweight

 21175

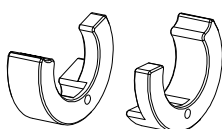


后桥配重
Rear Axle Counterweight

 21176

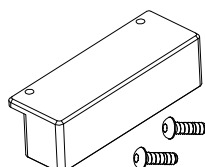


大梁前后配重
Chassis Beam F/R Counterweights

 21178

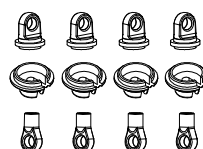


避震配件包
Shock parts pack

 21179

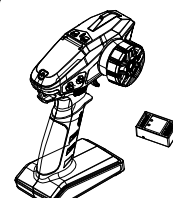


遥控/接收机
Transmitter/Receiver

 21180




电调60A
ESC 60A

 21181

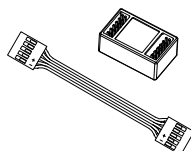


灯控盒
Light Control Boox

 21182

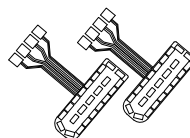


尾灯板 (PH2.0插头)
Taillight Board

 21183

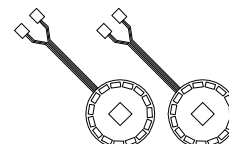


大灯板 (PH2.0插头)
Headlight Board

 21184

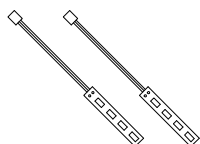


日行灯板 (PH2.0插头)
Daytime Running Light Board

 21185

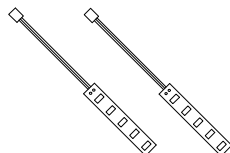

顶灯板 (PH2.0插头)
Roof Light Board

 21186

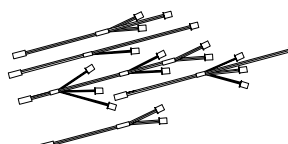


全车灯线组 (PH2.0插头)
Lights Wiring Harness set

21116




球头5.8-7.4
Hollow Steel Pivot Balls 5.8-7.4

 21117

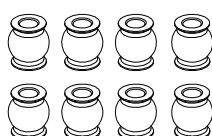


球头6.8-7.4
Hollow Steel Pivot Balls 6.8-7.4

 21118

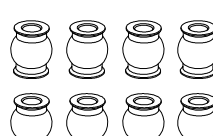

球头6.8-7.9
Hollow Steel Pivot Balls 6.8-7.9

 
21119

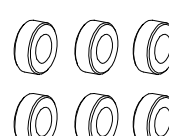

轴承5*10*4
Ball Bearing


配件表 Parts List

 21120

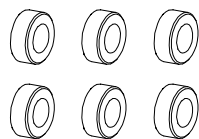


轴承5*11*4
Ball Bearing

 21121

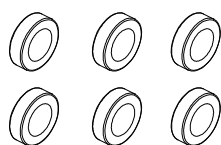


轴承6*12*4
Ball Bearing

 21122

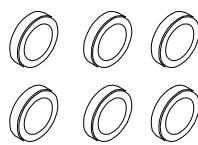


轴承12*18*4
Ball Bearing

 21123

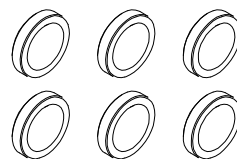


轴承15*21*4
Ball Bearing

 21124

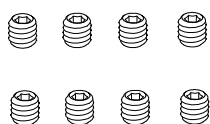


机米4*4
Headless Screws

 21125

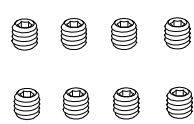


机米3*3
Headless Screws

 21126

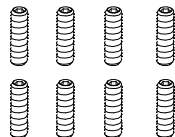


机米3*14
Headless Screws

 21127

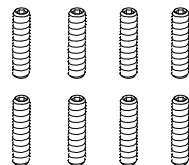


机米3*20
Headless Screws

 21128

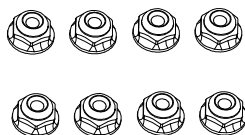


M4法兰螺母
Flange Lock Nuts

 21129

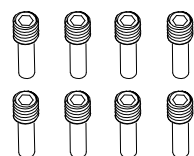


螺丝轴M4-12.5
Screw Axle

 21130

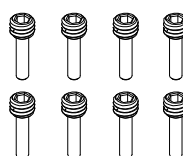


螺丝轴M4-11.5
Screw Axle

 21131

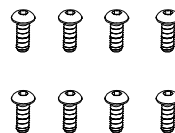


盘头内六角螺丝M2*6
Button Head Screws

 21132

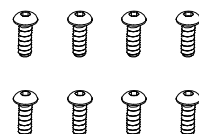


盘头内六角螺丝M2.5*8
Button Head Screws

 21133

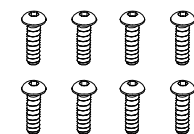


盘头内六角螺丝M2.5*10
Button Head Screws

 21134

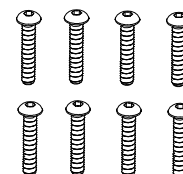


盘头内六角螺丝M2.5*16
Button Head Screws

 21135

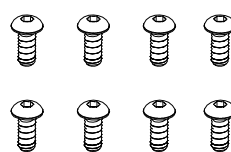


盘头内六角螺丝M3*8
Button Head Screws

 21136

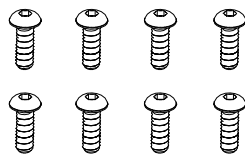


盘头内六角螺丝M3*10
Button Head Screws

 21137

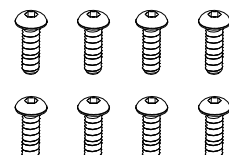


盘头内六角螺丝M3*12
Button Head Screws

 21138

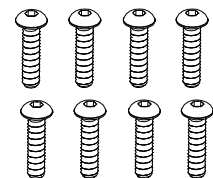


盘头内六角螺丝M3*14
Button Head Screws

 21139

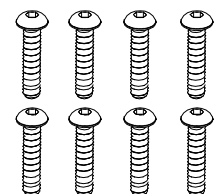


盘头内六角螺丝M3*16
Button Head Screws

 21140




盘头内六角螺丝M3*20
Button Head Screws

 21141




盘头内六角螺丝M3*26
Button Head Screws

 21142

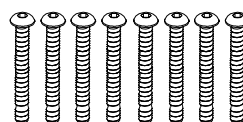

盘头内六角螺丝M3*28
Button Head Screws

 
21143

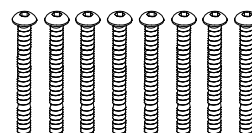

盘头内六角螺丝M3*32
Button Head Screws


配件表 Parts List

 21144

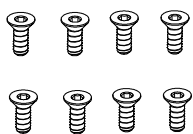


平头内六角螺丝M2.5*6
Flat Head Screws

 21145

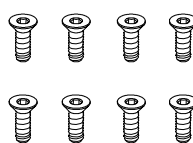


平头内六角螺丝M2.5*8
Flat Head Screws

 21146

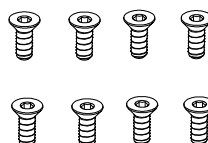


平头内六角螺丝M3*8
Flat Head Screws

 21147

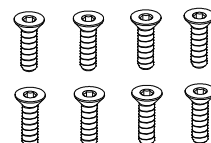


平头内六角螺丝M3*10
Flat Head Screws

 21148

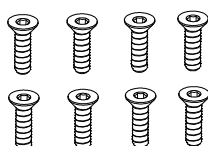

平头内六角螺丝M3*12
Flat Head Screws

 21149

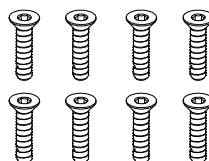


平头内六角螺丝M3*16
Flat Head Screws

21150




杯头内六角螺丝M2.5*8
Cap Head Screws

 21151

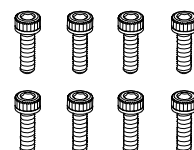


杯头内六角螺丝M3*14
Cap Head Screws

 21152

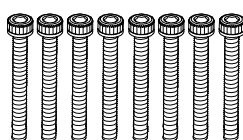


杯头内六角螺丝M4*40
Cap Head Screws

 21153




盘头十字自攻牙螺丝ST2*6
Button head Self-tapping screws

 21154




盘头十字自攻牙螺丝ST2.5*6
Button head Self-tapping screws

 21155

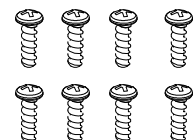


盘头十字自攻牙螺丝ST2.5*8
Button head Self-tapping screws

 21156

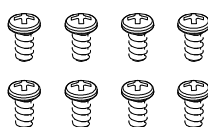


盘头十字自攻牙螺丝ST3*6
Button head Self-tapping screws

 21157

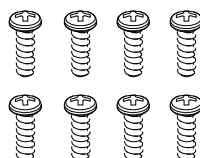


盘头十字自攻牙螺丝ST3*8
Button head Self-tapping screws

 21158

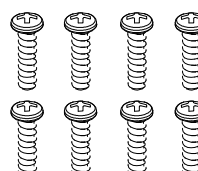


盘头十字自攻牙螺丝ST3*10
Button head Self-tapping screws

 21159

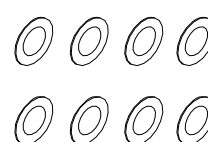


垫片8*5.1*0.2
Shims

 21160

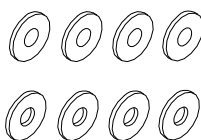

垫片8*3.1*0.5
Shims

 21161

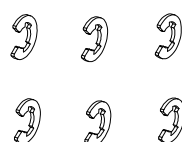


3.0E扣
E Clip

21162




4.0E扣
E Clip

 21163

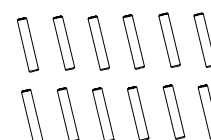


2*10销子
Pins

 21164

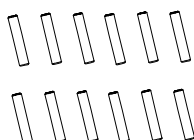


2*11销子
Pins

 21165

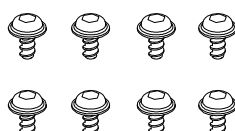




盘头内六角螺丝M2*4
Button Head Screws

 21166

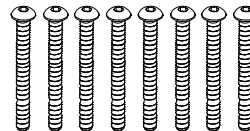

盘头内六角螺丝M3*30
Button Head Screws

   配件表(标准版)
Parts List (Standard Version)

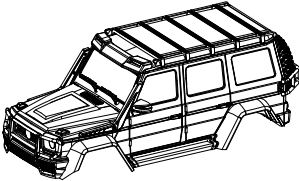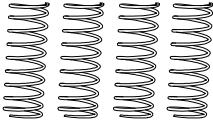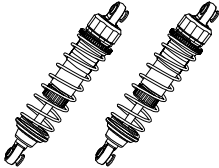21103  丝印车壳PC Screen Printing PC body	21105  丝印车壳组 Screen Printing PC body Set	21172  避震弹簧 Shock Absorber Springs	21173  避震器组 Shock Absorber Set